

Basic Manual



W51CA
by CASIO

CDMA 1X
WIN

au by KDDI

Contents/Ready

Phone Call

Inputting
Characters

Address Book/
Pair Function

Mail/
Hello Messenger

Camera

EZweb

EZ Navi

EZ FeliCa

EZ Television (1Seg)

EZ・FM

PC Site Viewer

Simple Mode/
Teens Mode

Other Functions

Troubleshooting/
Remote Auto Lock

Index

Introduction

Thank you for purchasing the W51CA.

Before using it for the first time, be sure to read the W51CA Basic Manual (this PDF manual) so as to know how to use it correctly. After you finish reading this manual, store it and the printed materials that come with the phone in a safe place for future reference.

Printed Manuals for the W51CA (Japanese)

The W51CA comes with a Basic Manual and an Instruction Manual.

For information about basic operation



W51CA Basic Manual

Refer to this English PDF manual.

For detailed information about each function



W51CA Instruction Manual

English version not available.

The following information is also available on the au website.

- To download the Basic Manual or Instruction Manual
(<http://au-pro.kddi.com/phone/torisetu/index.html>)
- To access a keyword searchable au online manual
(<http://www.au.kddi.com/manual/index.html>)

You can also access the au online manual using EZweb.

EZweb Access

EZトップメニュー (EZ Top Menu)

→auお客さまサポート (au Customer Support)

→調べる (Information)

→オンラインマニュアル (Online Manual)

Info

The typeface, fonts, and colors of the texts on the screens shown in this manual may differ from the actual contents. Also, certain icons and the scroll bars may be omitted.

Cellphone Etiquette

Mind your manners!

A cellphone always emits weak radio waves while it is turned on. Enjoy operation of your cellphone without forgetting to be considerate of those around you.

Some locations do not allow the use of cellphones.

- Using a cellphone while driving is dangerous and prohibited by the Traffic Control Law.
- Using a cellphone inside of an aircraft is prohibited by law. Be sure to turn off your cellphone before takeoff.



Watch out where you use your cellphone, and keep your voice down.

- Do not make calls at cinemas, theaters, museums, libraries, or other similar locations. Turn off the cellphone or use Manner Mode to ensure that the ring tone does not disturb others.
- When in public, move to a location where you will not be blocking traffic.
- On the Shinkansen, in a hotel lobby, or in other similar locations, move to a location where you will not disturb others.
- Take care to avoid talking on the phone in a loud voice.
- Before taking the picture of others, be sure to obtain permissions first.



Cellphone radio waves may interfere with electrical medical equipment.

- On a train or in other crowded locations, there is always the possibility that someone nearby may be wearing a pacemaker. Turn off your cellphone when you are in a crowded area.
- Follow the rules of hospitals and other medical facilities prohibiting the use or possession of cellphones.



Cellphone Basics

Features

Camera

Shoot photos and record movies, and send them by e-mail.

▶ **Page 63**



Hello Messenger

Enjoy meeting with the members using our original cartoon-like characters.

▶ **Page 59**



EZ Navi

EZ Navi Walk, Passenger Seat Navi, and Safety Navi allow you to get various kinds of location information. They are all built-in functions.

▶ **Page 80**

EZ FeliCa

Use the cellphone for shopping by using e-money, or use it as member's cards, point cards, and so on.

▶ **Page 84**



EZ Television (1Seg)

Enjoy watching TV programs or recording them.

▶ **Page 88**



Security Setup

Select either "Safety Buzzer" or "Hot Dial" as reliable setting function.

▶ **Page 116**



Mail

Send mail messages to other cellphones or to PCs.

▶ **Page 49**



EZweb

Download "Chaku-Uta®", wallpaper, and other data.

▶ **Page 72**



PC Site Viewer

View WEB sites created for viewing on PCs.

▶ **Page 99**



Manner Mode and Easy Voice Memo

Manner Mode

Use Manner Mode to turn off the ring tone so as not to bother others around you.



While the standby screen is displayed, hold down **マナー** for about one second.

▶ Page 35

Easy Voice Memo

If you cannot answer a call, Easy Voice Memo plays an answering message and records the caller's message.



While the standby screen is displayed, hold down **メモ/留守** for about one second.

▶ Page 36

Checking Power, Signal Strength, and Battery Level

Normally leave the phone turned on.



The phone needs to be turned on to make and receive calls.

Hold down **電源** for at least 1.5 seconds to turn on W51CA. After a while, W51CA turns on with tone and the standby screen appears.

▶ Page 14

You cannot talk on the phone if it is unable to receive a signal.



Signal strength is low in some areas, even if they are within the service area.

信号 indicates the current signal strength. ▶ Page 14

Keep an eye on the battery level.




The phone may not function properly if battery power is low.

電池 indicates the current battery level. ▶ Page 14

Never use your cellphone while driving!

Holding a cellphone in your hand, talking on a cellphone, or looking at a cellphone display to send mail or to perform any other operation while driving is prohibited by Japanese law.
(Revised Traffic Control Law, effective November 1, 2004)

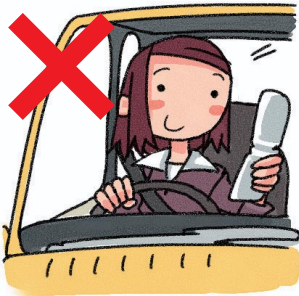

× Reading mail or looking at the display.



× Holding a cellphone in your hand to talk.

Turn off your cellphone or use Drive Mode while driving.

Drive Mode

In Drive Mode, the phone will play the message “ただいま車を運転しています。…” (I am driving right now...), and then ask the caller to leave a message using Easy Voice Memo.

While the standby screen is displayed, press マナー, and then press 1 (ON). Next, press 2 (Drive Mode) to enter Drive Mode.



Beware of spam and One-ring Calls!

How to Combat Spam

You can set up mail filters to block specific mail or mail identified as “未承諾広告※” (unsolicited advertisement), which often includes spam.

Your cellphone has the following filters to block spam.


- ・ 未承諾広告フィルター
(unsolicited advertisement filter)
- ・ アドレスフィルター (address filters)
 - － 指定拒否設定 (blocks specific mail)
 - － 指定受信設定 (receives specific mail)




Page 56

Beware of One-ring Calls!

A “One-ring Call” (wan-giri in Japanese) rings your phone only once, in an attempt to make you call back to a service that automatically bills you very high charges.

 If W51CA received a “One-ring Call”, the  icon appears at the head of an incoming record.



Page 31

Disaster Message Board Service

Disaster Message Board

The Disaster Message Board lets you use EZweb to register information about your well-being in case of a major disaster. The information you register can be accessed from anywhere in Japan over EZweb or the Internet.

Registering the safety information

- ◆ When a major disaster strikes, you can use your au cellphone to access the “災害用伝言板” (Disaster Message Board) on EZweb and register your current condition, comments, and other information about your well-being.
- ◆ After you register information, it can be sent by mail to family, friends, and other individuals you have registered as a recipient of your Disaster Message Board information.

Checking the safety information

- ◆ Disaster Message Board information can be accessed by inputting the phone number of an individual over EZweb or the Internet.*


※ Disaster Message Board information can be accessed from another type of cellphone, PHS, or PC at <http://dengon.ezweb.ne.jp/>.

Access method

 >>> Top Menu >>> 災害用伝言板
(Disaster Message Board)

<http://dengon.ezweb.ne.jp/>



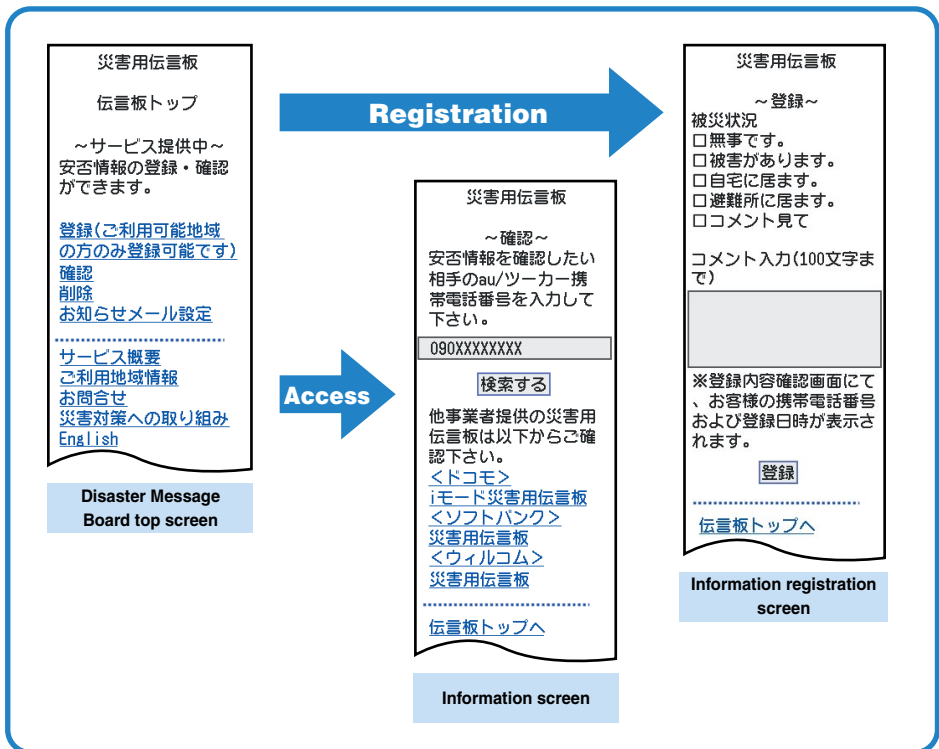

※ Registration contents are retained for up to 72 hours.

※ You can register up to 10 entries per phone number. Registering a new entry while there are already 10 registered entries, automatically overwrites the oldest entry.

※ You can view a Disaster Message Board demonstration at:

[📠](#) → Top Menu → auお客さまサポート → 調べる → 災害用伝言板(デモ版)
(au Customer Support) (Information) (Disaster Message Board (Demo))

※ To view the Disaster Message Board in English, select the “English” option on the Disaster Message Board top screen.

Contents

Cellphone Etiquette 1

Mind your manners!	1
--------------------------	---

Cellphone Basics 2

Features	2
Manner Mode and Easy Voice Memo	3
Checking Power, Signal Strength, and Battery Level	3
Never use your cellphone while driving!	4
Beware of spam and One-ring Calls!	5
Disaster Message Board Service	6

Contents 8

Ready 10

Checking the Contents of the Package	10
Names of Parts	11
Charging the Battery Pack	12
Turning On Power	14
Initial Values	14
Security Code and Passwords	15
Selecting English as the Display Language	16
Operation Basics	18
Display Indicators	19
Main Menu	20
Viewfinder Position and Self-portrait Position	22
Basic Operations in Viewfinder Position	23
Initializing E-mail and EZweb	24
Looking Up Your Current Phone Number and E-mail Address	25
Changing Your E-mail Address	26

Phone Call 28

Making a Call	28
Making an International Call	29
Answering a Call	30
Redialing (Outgoing Records/Incoming Records)	31
One-ring Calls	31
Changing the Ring Tone	32
Adjusting the Ring Tone Volume	34
Adjusting the Earpiece Volume during a Call	35
Turning On Manner Mode	35
Turning On Easy Voice Memo	36
Playing an Easy Voice Memo	37

Inputting Characters 38

Inputting an E-mail Address	39
Inputting Pictographs and Useful Sentences	40

Address Book 42

Registering an Address Book	42
Editing an Address Book Record	44
Adding Outgoing or Incoming Record Data to the Address Book	45
Dialing from the Address Book	46

Pair Function 47

Registering a Pair Partner	47
Making a Phone Call, Sending Mail, Inviting a Pair Partner to a Hello Messenger Meeting	48

Mail 49

Using E-mail	49
Using C-mail	50
Creating and Sending E-mail Messages ...	51
Reading Received E-mail Messages	53
Reading an E-mail Message with an Attached Photo or Movie	54
Replying to a Received E-mail Message ...	55
Avoiding Spam	56
Creating and Sending C-mail Messages ...	57
Reading Received C-mail Messages	58

Hello Messenger	59	EZ•FM	96
Display the Hello Messenger Menu	60	Before using an antenna	96
Invite the Members to the Meeting	61	Listening to the EZ•FM	97
When You Get an Invitation Message to Join	62	Listening to the EZ•FM as a BGM/Stopping the EZ•FM	98
Camera Features	63	PC Site Viewer Features	99
Camera	65	PC Site Viewer	100
Shooting a Photo	65	Mastering Operation Basics	100
Recording a Movie	66	Using PointCast	101
Shooting Photos and Recording Movies in Viewfinder Position	68	Simple Mode	103
Viewing Photos and Movies	70	Entering Simple Mode	103
Attaching a Photo or Movie to an E-mail Message	71	Exiting Simple Mode	104
EZweb	72	Using the Simple Mode Main Menu	105
Using EZweb	72	Adding Data to the Address Book in Simple Mode	106
Displaying the EZ Top Menu	73	Using the Address Book in Simple Mode	108
Bookmarking Sites You Frequently Access	74	Creating and Sending E-mail Messages in Simple Mode	109
Viewing a Bookmarked Site	75	Shooting a Photo in Simple Mode	111
Downloading Chaku-Uta®	76	Viewing Photos in Simple Mode	112
Downloading Chaku-Uta-Full®	77	Teens Mode	114
Checking Charges	78	Using Teens Mode	114
EZ Channel-Plus/EZ Channel	79	Turning on Teens Mode	115
EZ Navi Features	80	Other Functions	116
Safety Navi Features	82	Security Setup Features	116
EZ FeliCa	84	Extension Mode	117
Communicating with Reader/Writer	85	Troubleshooting	119
Setting FeliCa Lock	86	If you lose your W51CA	120
Using FeliCa-supported EZ Apps	87	Index	122
Using au Keitai Coupon	87		
EZ Television (1Seg)	88		
EZ Television (1Seg) Features	88		
Terrestrial Digital TV Broadcasting	89		
Watching EZ Television (1Seg)	90		
Watching EZ Television (1Seg) Using Viewfinder Position	92		
Recording Movies from TV Programs	93		
Stopping EZ Television (1Seg)	95		


Ready

Before using the W51CA, check the contents of the package comes with your W51CA. You should also familiarize yourself with basic operations, like how to charge the battery, how to turn the power on, etc.




Checking the Contents of the Package


● W51CA

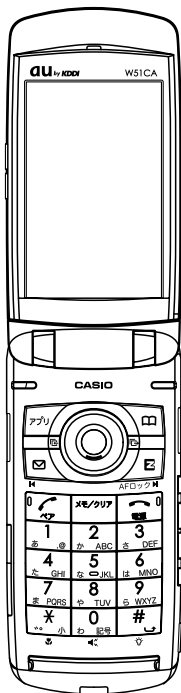


● Battery pack (51CAUAA)

 


● Desktop holder (51CAPUA)

 

 
● Casio round-type earphone jack conversion adaptor 01 (01CAQNA)



● MDR-E0931 (sample) by SONY

 

● Casio USB cable 01 (01CAHUA)

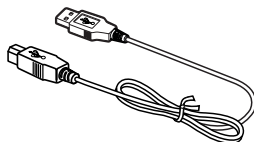

● CD-ROM



● Warranty (Japanese)

● Osaifu Keitai® Basic

Manual (Japanese)

● LISMO Install Guide (Japanese)

● Basic Manual (Japanese)



● Operating Precautions (Japanese)

● Global Expert Owner's Guide (Japanese)

● Instruction Manual (Japanese)




Info

- The microSD™ memory card is not included.
- An AC adaptor is not included. It is up to you to purchase a common AC adaptor 01 (option).

Names of Parts

Front


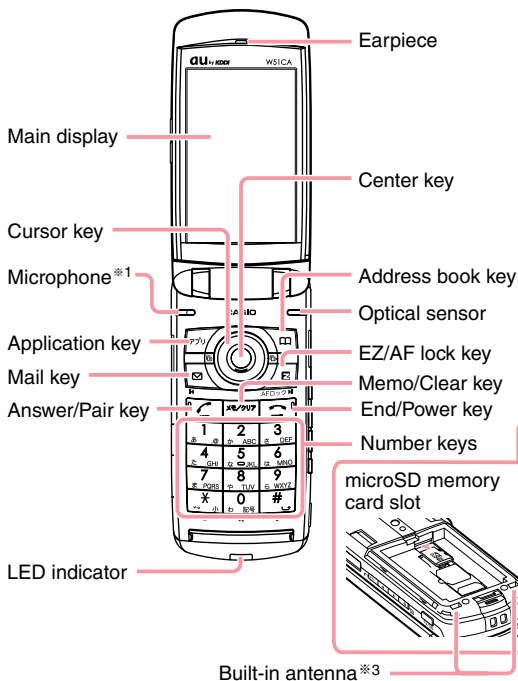


※1: During a call, do not cover the microphone with your hands or your chin. The microphone (placed on W51CA shown above) allows you to talk over your W51CA in Viewfinder position.




※2: Take care to avoid covering the built-in antenna with your hand when using the phone, using EZweb, and when accessing GPS information.

※3: Take care not to touch the exposed area of built-in antenna.

Back

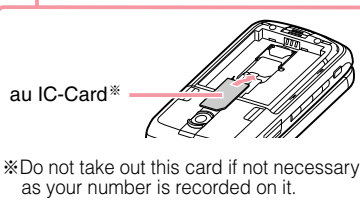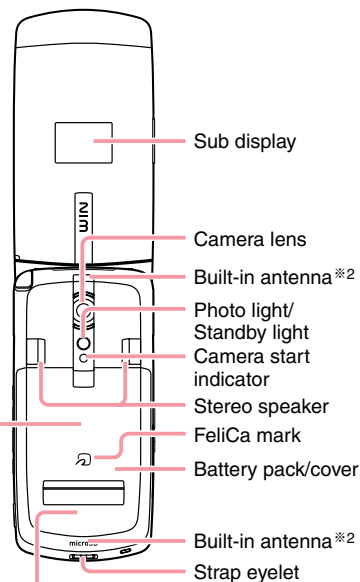

Side

 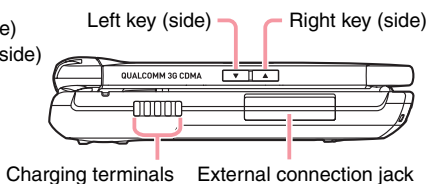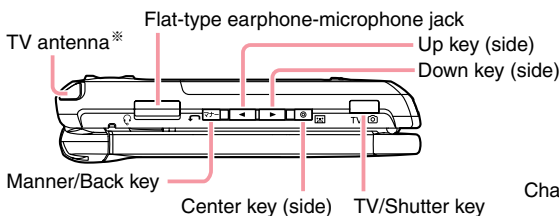



※ Extend the TV antenna when you watch EZ Television (1Seg).


Using the TV antenna (as extended when using EZ•FM, EZweb or making a call) does not affect call quality.

Charging the Battery Pack

The battery pack that comes with the phone is not fully charged when you purchase it. Be sure to charge the battery pack before using the W51CA for the first time. Charging takes about 140 minutes.

You should recharge the battery pack whenever the battery level icon shows  or .

Check the shape of the connectors to ensure they are aligned correctly when you connect them.

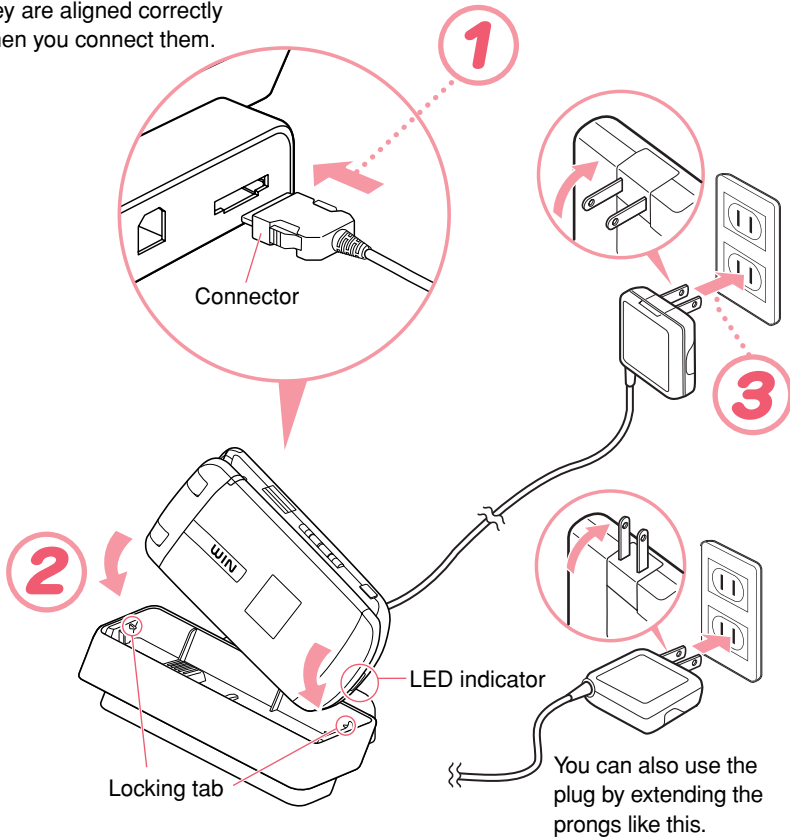

CAUTION

- ◎ You must purchase a common AC adaptor 01 (option) for charging. Note that the configuration of the AC adaptor may be different from that shown in the illustration above.
- ◎ Pull out the connector of the common AC adaptor 01 (option) straight so as to be parallel to the W51CA or the desktop holder connector terminal when you connect them.


1 Connect the common AC adaptor 01 (option) to the desktop holder.


Check the shape of the connectors to ensure they are aligned correctly before you connect.

Trying to force a connection may damage the connectors.

2 Insert the W51CA into the desktop holder.

3 Fold out the power plug of the common AC adaptor 01 (option), and then plug it into a 100V AC power outlet.


This will cause the W51CA LED indicator to light red, and  (charging battery icon) to display.

When charging is completed, the battery level icon will show  and the LED indicator will go out.

When charging the battery with your W51CA in Viewfinder position, check the charging battery icon shown on the screen. If you set "Func in Charge" to "MEDIA STAND," the screen keeps illuminating with the normal brightness.

To remove the W51CA from the desktop holder, holding the holder by hand and remove W51CA.

※ You can connect the common AC adaptor 01 (option) to the W51CA directly to charge the battery pack.

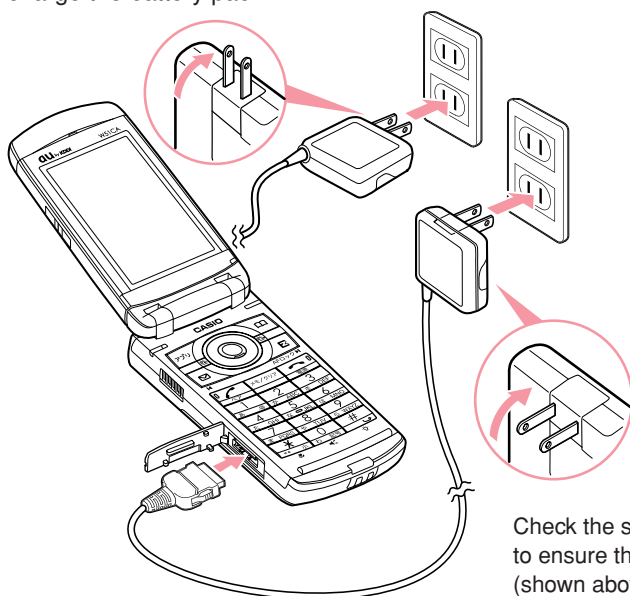

Check the shape of the connector ends to ensure they are aligned correctly (shown above) when connecting.


Turning On Power



1

Hold down  for at least 1.5 seconds.

0  ベア	メモ/クリア	 電源
1 あ い う	2 か ABC	3 さ DEF
4 た GHI	5 な に JKL	6 は MNO


The standby screen appears.

Icon					
Signal Strength	Strong	Medium	Weak	Very Weak	Out of Range

- Communication is not possible while the signal strength icon is  (Out of Range).
- Communication may not be possible while the signal strength icon is  (Very Weak).

Icon							
Battery Level	Fully Charged	High	Medium	Low	Fully Discharged	Extension Mode*	Charging

- The battery level icon  (Fully Charged) only shows during charging.

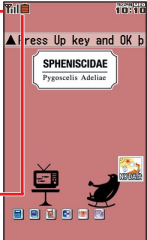

Standby screen

※ Using Extension Mode

Using the Extension Mode, W51CA automatically shuts down the radio wave after issuing the Low Battery Alert. This is quite a useful function that you can still check outgoing/incoming records, content of e-mail, address book, Schedule and so on when necessary. In this case, you can only use the functions which needs no radio wave.

▶ Page 117

Turning off power

Hold down  for at least 1.5 seconds.

Initial Values

The initial values are as follows.

Lock No.	1234	Font Size	Add Book Char	Middle
Teens Lock No.	1234		Input	Middle
Caller ID	ON		Mail Char	Middle
Incoming Display	ON		EZweb Char	Small
Profile	Blank		Data Folder Char	Middle
			Text Memo Char	Middle

Security Code and Passwords

The W51CA lets you use the numbers and passwords described below. Be sure to take steps so you do not to forget your numbers and passwords. You will need them to perform various operations and to access subscription services.

Security Code

Usage Examples	① For remote operation of the Answering Service (Voice Mail) and Call Transfer from a standard phone
	② For inquiries, applications, and service modifications using au Customer Service Center voice guidance, au website, and EZweb
	③ For changing e-mail settings
Initial Values	4-digit number you entered on your subscription contract

Lock No.

Usage Examples	For modifying various phone settings
Initial Values	1234

Teens Lock No.

Usage Examples	For modifying various phone settings in Teens Mode
Initial Values	1234


EZ Password

Usage Examples	For entering and canceling subscriptions for EZweb fee-based content
Initial Values	4-digit number you entered on your subscription contract



Premium EZ Password



Usage Examples	① For entering and canceling subscriptions for EZweb fee-based content paid for using “まとめてau支払い” (au Collective Payment Service)
	② For purchasing products from EZweb sites that use “まとめてau支払い” (au Collective Payment Service)
Initial Values	4-digit number you entered on your subscription contract

Selecting English as the Display Language



- 1** While the standby screen is displayed, press .



 - 2** Use  to select “機能設定” (Settings), and then press  (OK).

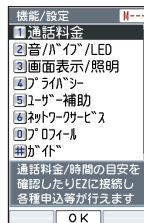



- 3** Press  (画面表示/照明) (Screen Setup/Display Lighting).

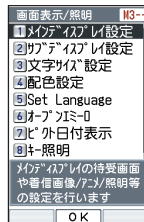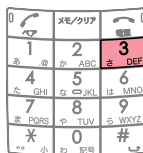

4

5
な JKL

(Set Language).

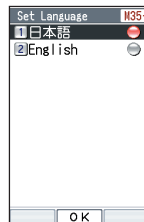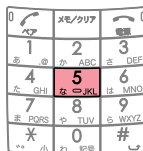


Ready

5

2
か ABC

(English).

This selects English as the display language.

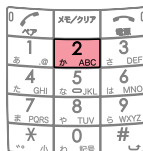**CAUTION**

Even if English is selected as the display language, schedule and other dates are displayed in the format year/month/day. Folder names inside of the Data Folder are also displayed in year/month/day format.

Operation Basics

Key functions

- Displays incoming records.
- Returns to the previous menu screen.
- Selects an item.



- Displays the standby shortcut icon.
- Selects an item.

- Displays the EZ apps menu.

- E-mail
- C-mail (hold down for about one second)

- Dials/answers a phone call.
- Displays the Pair Function.

- Memo
- Toggles Easy Voice Memo on and off (hold down for about one second).
- Deletes a character.
- Returns to the previous menu screen.

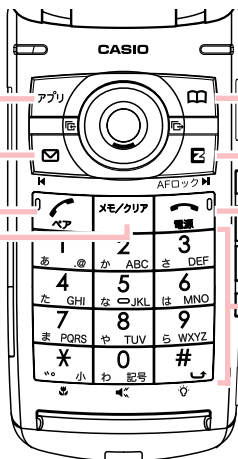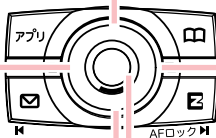

- Selects news flash telop, window.
- Selects an item.

- Displays outgoing records.
- Scrolls forward one menu screen.
- Selects an item.

- Displays the main menu.
- Applies an item.

- Displays the address book.
- Creates a new address book (hold down for about one second).

- Displays the EZ menu.

- Toggles power on and off (hold down for at least 1.5 seconds).
- Hangs up.
- Terminates a function.
- Returns to the standby screen.

 
 
- Inputs phone number.
- Inputs text character.

Side key functions → “Viewfinder Position and Self-portrait Position” (Page 22)

- Toggles Manner Mode on and off (hold down for about one second).

- Displays the main menu.
- Applies an item.

- Displays outgoing records. ※
- On menu, scroll one screen forward/backward. ※
- Selects an item. ※



- Selects news flash telop, window. ※
- Displays the standby shortcut icon. ※
- Selects an item. ※
- Page scroll at browser display

- Starts EZ Television (1Seg).
- Starts photo (hold down for about one second).
- Shutter when shooting photo
- Starts recording when recording a movie.



※ Can be operated in Viewfinder position only.

Info

- ◎ If you lose track of where you are or if you make a mistake:
Press / to scroll back to the previous screen.
Press to return to the standby screen.
- ◎ When is in the lower right corner of the photo or movie screen, pressing will display key help.
- ◎ Holding down / for about one second toggles side key's disabling feature on and off while W51CA is folded. To cancel the side key's disabling feature, follow the above procedure with W51CA unfolded.


Display Indicators

The following explains the main icons that appear on the standby screen.

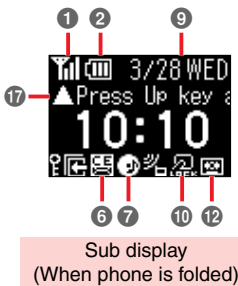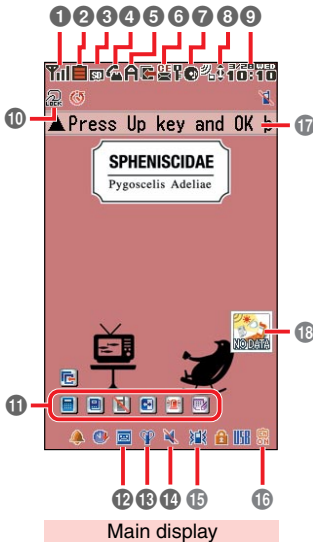

1		Signal strength
2		Battery level
3		The microSD™ memory card (commercial item) is inserted into the cellphone.
4		During a call
5		EZ apps (BREW®)/Hello Messenger/PC Site Viewer on
6		Unread mail
7		au Music Player/SD-Audio Player/ EZ Television (1Seg)/EZ-FM on
8		Key guidance on the EZweb screen (while browsing) or the EZ Channel-Plus program screen (while playback), etc.
9		Current time The date and time are set automatically.
10		FeliCa Lock on
11		Selects the user defined icons such as calculator, Mobile Dictionary, Emission Off Mode, Mode Settings, Extension Mode, and Note Pad 01 (information from CASIO), etc. by pressing and .
12		Easy Voice Memo on
13		Manner Mode on
14		Ring tone off
15		Vibrator on
16		EZ Channel-Plus is in use.
17	—	News flash telop
18	—	News flash window

Key symbols used in this manual

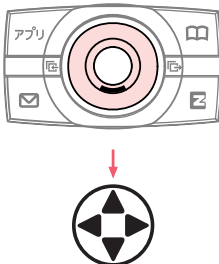




The cursor key described in this manual using the key symbols shown below.


or key:

or key:

, , or key:


Main Menu

Pressing  while the standby screen is displayed displays the main menu. Use  to select the icon, and then press  (OK) to access the function associated with the icon.

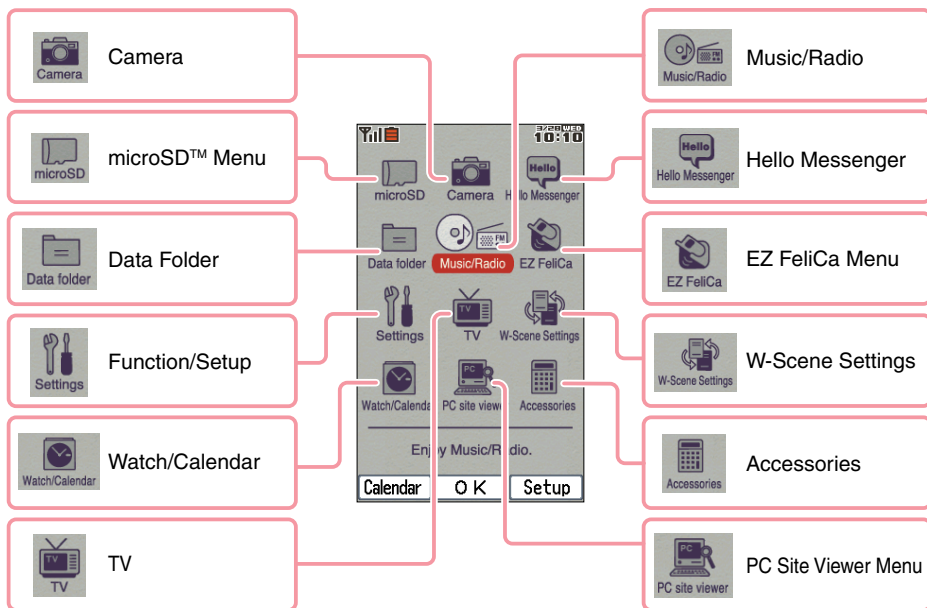

Using the Main Menu

Example: To display the setting screen from the main menu.

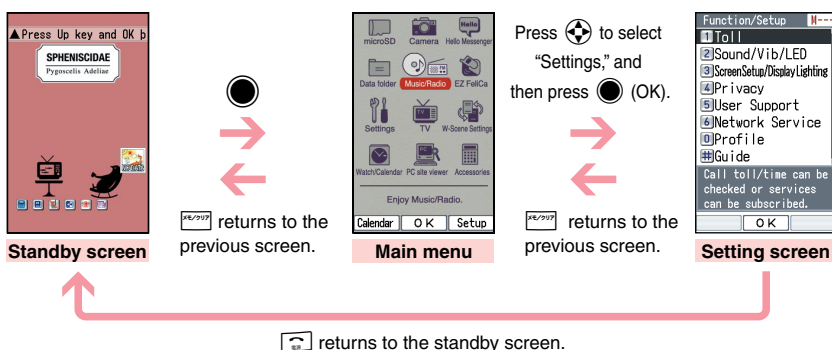




Left Center Right

Enjoy Music/Radio.

Calendar OK Setup


アプリ FM FM FM

Left soft key 	Executes the function on the left.
Center soft key 	Executes the function on the center.
Right soft key 	Executes the function on the right.

■ Using Menus

Pressing the soft key that corresponds to the “Menu” at the bottom of the display will display a menu of various operations related to the function you are currently using.

Example: To open the photo monitor menu screen from photo monitor screen.

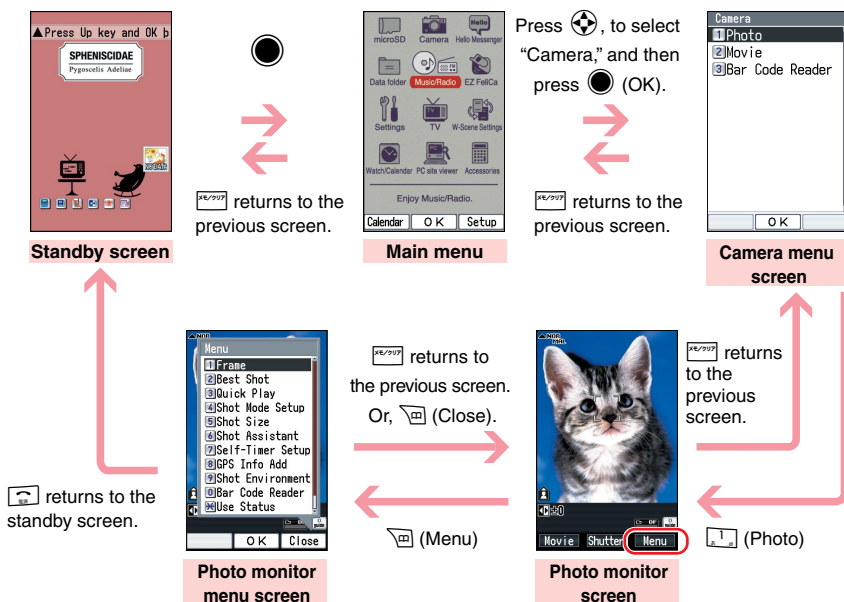




Viewfinder Position and Self-portrait Position

You can execute the operations with your W51CA open, set in Viewfinder position or Self-portrait position.

CAUTION


- ◎ Rotate your W51CA display in the direction as illustrated below (within 180 degrees from the normal position). Gently rotate your W51CA display. Otherwise, you may damage your W51CA.
- ◎ During rotating (motion **2-1**), do not use your W51CA or force to give open-close motion. It may also cause damage.

- 1 Open your W51CA display to stand straight up.**
- 2 Gently rotate the display 180 degrees clockwise.**

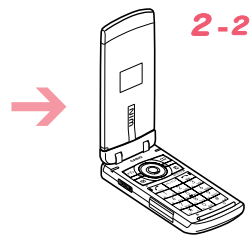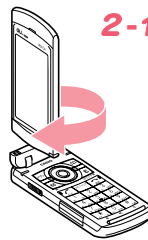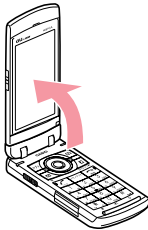

■ When you set your W51CA in Viewfinder position

 - 3 Close your W51CA so as to make your W51CA display facing toward you.**




● Viewfinder position

Viewfinder position refers to the position with your W51CA closed and its display turned over. In Viewfinder position, you can use side keys (マナー, 照, 下, 上, 左, 右, 〇) to operate your W51CA.

You can also take photos using W51CA as a Viewfinder (digital camera-like).

 ■ When you set your W51CA in Self-portrait position







- 3 Turn over your W51CA so as to make camera lens facing toward you.**










● Self-portrait position

You can take your self-portrait photo easily with this position.

 
 



 







Basic Operations in Viewfinder Position

In Viewfinder position, you can use side keys (     ) to play songs listed with au Music Player and read the data.

For key operations in Viewfinder position, you can use     instead of  or use  instead of .

 returns to the previous screen.

■ Key operations in Viewfinder position

Key	Description
	<ul style="list-style-type: none"> • Displays the Manner menu. • Toggles Manner Mode on and off (hold down for about one second). • Set the ring tone mute and stop the vibrator when there is an incoming call. • Returns to the previous screen. • Returns to the standby screen (hold down for about one second). • Hangs up (hold down for about one second).
   	<p>Pressing  selects news flash telop/news flash window.</p> <p>Pressing  selects standby shortcut icon.</p> <p>Pressing  displays incoming records.</p> <p>Pressing  displays outgoing records.</p> <ul style="list-style-type: none"> • Moves the cursor on the screen (instead of  (Up/Down/Left/Right key)).
	<ul style="list-style-type: none"> • Displays the main menu. • Executes the function on the center part of the bottom of the screen (instead of  (Center key)). • Answers the call when there is an incoming call (hold down for about one second).
	<ul style="list-style-type: none"> • Activates EZ Television (1Seg) function. • Uses as shutter key when you shoot photos. • Uses as starting record key when you record movies. • Saves photos or movies. • Activates photo function (hold down for about one second).

Info


- In Viewfinder position, you can only execute the operations using side keys. When needed, you can execute other operations with your cellphone open.
- You can make or answer a call in Viewfinder position.
- During a call in Viewfinder position, check the earpiece position to hear the caller's voice properly. During a call or recording a call, the image you see on the screen is upside down.
- During a call, it is recommended to use your cellphone opened.
- In this manual, operation procedures are usually for the normal position (with display facing inward toward the keypad). For operations in Viewfinder or self-portrait position (with display facing outward), the position you can use is clearly mentioned.

Initializing E-mail and EZweb

An EZweb subscription is required to use e-mail and EZweb. If you did not subscribe when you purchased your phone, contact your nearest au shop or the au Customer Service Center.


※ You will be assigned an e-mail address automatically when you perform the EZweb initialization procedure.

1 While the standby screen is displayed, press .

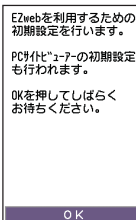

2 Press .

Wait until the phone connects to the server for initialization.

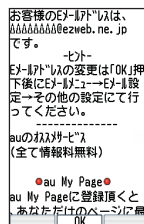

3 After your automatically assigned e-mail address appears, press .




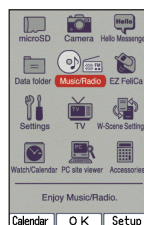
Info



Pressing   also allows you to make initial settings.


Looking Up Your Current Phone Number and E-mail Address

 


- 1** While the standby screen is displayed, press .




- 2** Use  to select "Settings," and then press  (OK).

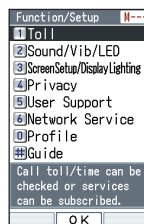
 


- 3** Press  (Profile).

Your current phone number and e-mail address appear.

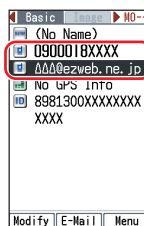

Info

You can also look up your phone number and e-mail address by pressing , and then  while the standby screen is displayed.


Changing Your E-mail Address


E-mail address

△△△@ezweb.ne.jp

Part you can change Domain name


1

While the standby screen is displayed, press .

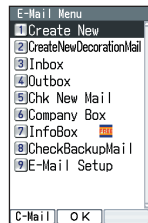



2


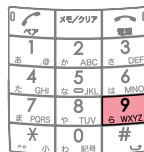
Press  (E-Mail Setup).




3



Press  (Other Setup).

When the EZweb connection confirmation screen appears, press  (Yes).

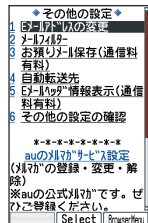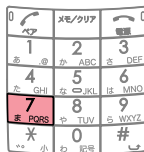

4

 Press  (E メールアドレスの変更) (Change E-mail Address).

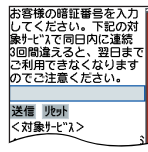

※入力時の注意※

1. 半角英数字文字で「@ezweb.ne.jp」より左側のみご入力ください。
2. Eメールアドレスは半角英数字30文字まで入力可能です。

記号は「.」、「-」、「_」が使用可能です。「.」は最初には利用できません。最初に数字の「0」を使用することはできません。

2. Eメールには半角英数字30文字まで入力可能です。
記号は「.」、「-」、「_」が使用可能です。「.」は最初には利用できません。最初には数字の「0」を使用することはできません。

△△△△△△△△△△△△△△
@ezweb.ne.jp

送信 **リセット**

前のページへ

Select Cancel

 
 
新しいメールアドレスは
△△△△△△△△@ezweb.ne.jp
です。
よろしいですか？
OK キャンセル


- ◎ Your Security Code is the 4-digit number you entered on your subscription contract. If the wrong Security Code is entered three times a day, the setting operation will be disabled until the following day.
- ◎ If your e-mail address won't change in step 7:
The new e-mail address you entered may be registered by someone else already. Try entering a different address.

Phone Call

Making a Call

1


While the standby screen is displayed, use the number keys ( to ) of the keypad to enter the phone number you want to call.

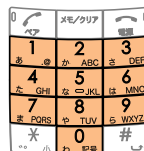

When calling a standard phone, you need to enter the area code.

2

Press .

After you finish a call, press  to hang up.

※ The caller always hears your voice even when you cover the microphone with your hands.



Send Methods

Displayed when you press  (Call) in step 2.

Call : Your phone number is provided to the party you are calling in accordance with the caller ID setting of your phone.

184 Add : Your phone number is not provided to the party you are calling.

 
186 Add : Your phone number is provided to the party you are calling.

Making an International Call

■ au International Call Service

Available without any additional application

Ex: To call 212-123-△△△△ in the USA




- Calling charges for this service are added to monthly mobile phone calling charges and billed together.
- Please check the Country code at the au Customer Service Center.
- For charges, please refer to the au MOBILE PHONE SERVICE GUIDE or contact the au Customer Service Center.

 
■ 001 KOKUSAI MOBILE TALK

Application required.

For inquiries, please contact the KDDI Customer Service Center.


 **0077-7160** (toll-free; open 9:00 to 20:00 on everyday including weekends and national holiday)


Ex: To call 212-123-△△△△ in the USA



- Charges for 001 KOKUSAI MOBILE TALK are charged separately from monthly au telephone charges.
- Please check the Country code at the au Customer Service Center.
- For charges, please refer to the au MOBILE PHONE SERVICE GUIDE or contact the au Customer Service Center.

Answering a Call

1 Press  to answer an incoming call.

After you finish a call, press  to hang up.


0		メモ/フリマ	0
1	2	3	
あ い う え お	か け け け	さ す せ	
4	5	6	
な に ぬ ね ぬ	は ひ へ	ほ へ へ	

Info

Display for Incoming Calls



 If the caller's name is in your address book, it appears on the display. If not, only the caller's phone number is displayed.




A message appears when the phone number of the caller is not provided for some reason.


ID Unsent : The caller's phone refused to send its phone number.

Pay Phone : The call is from a pay phone.

Not Support : The call is from a phone that does not support caller ID.

  Missed Call Notification




The message "Call X" appears on the display if you did not answer one or more calls. Press  (OK) to check incoming records (caller phone number, etc.).

To redial a number

→ "Redialing (Outgoing Records/Incoming Records)" (page 31)

Redialing (Outgoing Records/ Incoming Records)

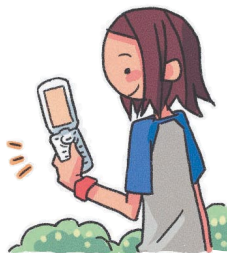

1 While the standby screen is displayed, press .

 : Displays outgoing records.

 : Displays incoming records.



Outgoing	
01	3/28Wed10:07 Chris Tait
02	3/27Tue 9:32 Mark Brown
03	3/28Mon17:20 030001XXXX
04	3/28Mon12:20 Betty Mason
05	3/25Sun16:08 Play VM

2 Use to select the record whose number you want to dial, and then press .



Info

The phone stores up to 50 records each for the outgoing records and incoming records. When a record is created while there are already 50 records in memory, the oldest current record is deleted automatically to make room for the new one.

One-ring Calls


What is a “One-ring Call”?

A “One-ring Call” is an incoming call that rings your phone only once, which aims it to be stored in your incoming records. If you redial the number shown in your incoming records, often you are connected to a dating service or some other service that may bill you very high charges. Always keep in mind that it is a good idea to avoid calling back unfamiliar numbers.

One-ring Call indicator


Incoming	
01	3/28Wed10:07 0900001XXXX
02	3/28Wed 9:40

The  icon indicates an incoming call you did not answer.



The  icon indicates an incoming call that rang for four seconds or less. These calls may be One-ring Calls with high possibility.


Changing the Ring Tone

 



- 1 While the standby screen is displayed, press .




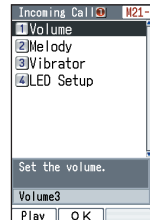
- 2 Use  to select "Settings," and then press .

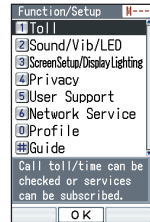


- 3 Press  (Sound/Vib/LED).

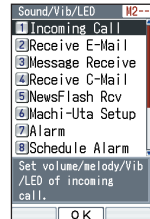

- 4 Press  (Incoming Call).




5 Press **2** (Melody).

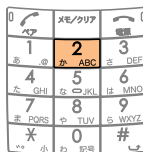


6 Press **1** (Fixed Sound).

To hear the currently selected ring tone, press **Check** (Check).

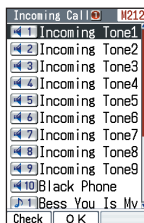

7 Use **Up/Down** to select the ring tone you want, and then press **OK**.

 The ring tone is set.



Info


- ◎ The initial setting is “Incoming Tone1.”
- ◎ You can also download a “Chaku-Uta®” from the Internet and use it for your ring tone.
→ “Downloading Chaku-Uta®” (page 76)

Adjusting the Ring Tone Volume

To adjust the ring tone volume, perform steps 1 through 3 under “Changing the Ring Tone” (page 32), and then continue with the following steps.



1 Press (Incoming Call).

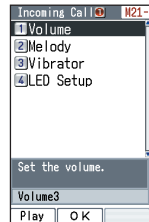

2 Press (Volume).

To hear the ring tone at the current volume setting, press (Play).



3 Use to adjust the ring tone volume, and then press (OK).

: Increases volume.

: Decreases volume.



Info

Step-up : Ring tone volume gradually increases.

Step-down: Ring tone volume gradually decreases.

Mute : Ring tone does not sound.


To display the “Step-up” and “Step-down” settings, select volume level 5, and then press .

To display the “Mute” setting, select volume level 1, and then press .


Adjusting the Earpiece Volume during a Call



1


During a call, use  to adjust the volume.

 : Increases volume.

 : Decreases volume.



You can adjust the earpiece volume (level 1-6).

 
When you set the maximum volume (level 6),  is displayed on the screen.


Turning On Manner Mode


While Manner Mode is set to on, the phone alerts you to incoming calls by vibrating.




1

While the standby screen is displayed, hold down  for about one second.

 This turns on Manner Mode, the  icon appears on the display while Manner Mode is turned on.




Turning on Manner Mode also turns on Easy Voice Memo, which is indicated by  on the display.


While Manner Mode is set to on, the phone vibrates without sounding its ring tone.


To turn off Manner Mode, hold down  for about one second.

 Turning On Easy Voice Memo



- 1** While the standby screen is displayed, hold down  for about one second.

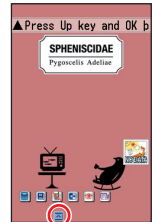

This turns on Easy Voice Memo, the  icon appears on the display while Easy Voice Memo is turned on.

You can use Easy Voice Memos (up to 4 memos), and each memo can contain up to 20 seconds recording time.

If a new Easy Voice Memo is recorded when there are already four memos in memory, the oldest, unprotected memo that has already been played back is deleted automatically to make room for the new one. Protected Easy Voice Memos are not deleted.

To turn off Easy Voice Memo, hold down  for about one second.

Info

Using the Answering Service (Voice Mail)


The Answering Service (Voice Mail) can be used to answer the phone and take messages when the phone is turned off, or when you are in a location where signal reception is not possible.

Playing an Easy Voice Memo




When there is a recorded Easy Voice Memos

The message “ Call” and “ EasyVoiceMemo” appear on the standby screen.

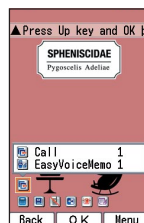


- 1 Select “ Call,” and then press (OK).

The incoming records list appears.

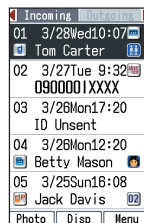

- 2 Use to select the record with the icon, and then press (Disp).

The incoming record detail screen appears.

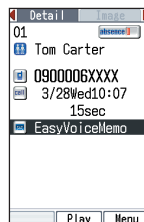

- 3 Use to select “ EasyVoiceMemo,” and then press (Play).

 
 
The Easy Voice Memo plays back.



Info














 To delete an Easy Voice Memo, press while the standby screen is displayed. Select the Easy Voice Memo you want to delete, press (Menu), and then (Delete). Next press (Delete One), and then press (Yes).


Inputting Characters

Input characters using keypad keys  through .

The table below shows the characters each key cycles through when you press it.



Key	Number of Presses								
	1	2	3	4	5	6	7	8	9
	.	@	-	_	/	:	~	1	
	a	b	c	A	B	C	2		
	d	e	f	D	E	F	3		
	g	h	i	G	H	I	4		
	j	k	l	J	K	L	5		
	m	n	o	M	N	O	6		
	p	q	r	s	P	Q	R	S	7
	t	u	v	T	U	V	8		
	w	x	y	z	W	X	Y	Z	9
	0 . @ - _ / : ! ? ~ () * # + , ^ ; < = > \$ ¥ % & [] ' ` { } ~								
	Toggles between upper case and lower case (Example: a ⇌ A).								
	Returns to the previous character.								
	Undoes the last delete operation.								

- In order to input consecutive characters that are assigned to the same key, press  to move the cursor (highlighted), and then press the same key to input next character.

CAUTION


Allowable Characters in Your E-mail Address

Your e-mail address (the part at the left of “@”) can contain up to 30 characters, including single-byte English lower case letters, hyphens (-), periods (.) and underbars (_).

A period (.) or a zero (0) cannot be used as the first character.

Characters and symbols that are shaded in the above table cannot be used at the left of “@” in the address format “△△△@ezweb.ne.jp.”

Info

You can input a period (.) or “at” symbol (@) by pressing .

Inputting an E-mail Address

Inputting “mark@ezweb.ne.jp”


In this example, we will input “mark@ezweb.ne.jp” for “<E-Mail Add1>.” To input “<E-Mail Add1>,” perform steps 1 through 6 under “Registering an Address Book” (page 42), and then perform the following steps.



1


Input “mark.”

To input “m”: Press once.
To input “a”: Press once.
To input “r”: Press three times.
To input “k”: Press twice.

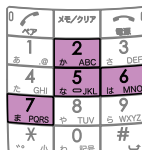

2

Press (Menu).

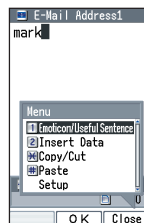

3

 
Press (Emoticon/Useful Sentence), and then (Useful Sentence).



4


Use to select “@ezweb.ne.jp,” and then press (OK).

“mark@ezweb.ne.jp” is inputted.
You could also input “@ezweb.ne.jp” by pressing .





Inputting Pictographs and Useful Sentences

The following procedure shows how to input pictographs and useful sentences into the body text when creating a new e-mail message.

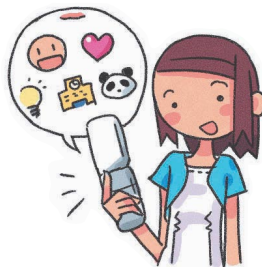

- 1 Press **アプリ** (Char), and then **は** MNO **😊** (Pictograph).

You can also select a pictograph by pressing **#**.

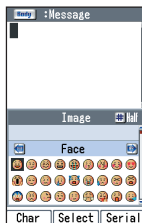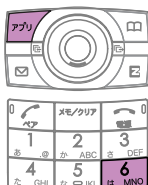


- 2 Use **⬆** to select the pictograph you want, and then press **●** (Select).



Use **⬅** and **➡** to scroll through the various categories of pictographs.
To input consecutive pictographs, press **⬅** (Serial).



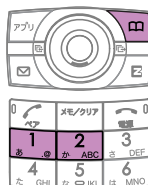


- 3 Press **メニュー** (Menu), **1** あ (Emoticon/Useful Sentence), and then **2** か ABC (Useful Sentence).



4

Use  to select the useful sentence you want, and then press  (OK).

 Here we will select “Happy birthday!”
You can also input “Happy birthday!” by pressing  .


 


Info

The following shows the input screens for symbols (double-byte) and emoticons.





Symbol (Double-byte) Input



In step 1 of the above procedure, press  (Char), and then  (&@) to display the “FullSym” (double-byte symbol menu).

Emoticon Input




In step 3 of the above procedure, press  (Emoticon) in place of  (Useful Sentence) to display the emoticon menu.
You can also display the emoticon menu by pressing  in place of  (Menu) in step 3.


Address Book

Registering an Address Book

 



- While the standby screen is displayed, hold down  for about one second.







- Select " <Name>," and then press  (Edit).




- Enter the name, and then press  (OK).

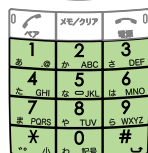 The  <Reading> is generated automatically when you enter a name.
To input text
→ "Inputting Characters" (page 38)



 - Use  to select " <Phone Number1>," and then press  (Edit).



5 Enter the phone number, and then press (OK).

When entering the number of a standard phone, be sure to include the area code.



6 Use to select "<E-Mail Add1>," and then press (Edit).

If you do not want to enter an e-mail address, jump to step 8.



7 Enter the e-mail address, and then press (OK).


 



To input an e-mail address
→ "Inputting an E-mail Address"
(page 39)



8 Press (Reg).



Info


- The Address Book can contain up to 700 records.
- Address book records are numbered from 000 through 699. A new record is automatically assigned to the lowest available unused record number.
- An address book record can also contain a scene, website URL, street address, birthday, and other personal information.
- To delete an address book record, press  while the standby screen is displayed. Select the address book you want to delete, press  (Menu), and then press  (Delete). Next press  (Delete One), and then press  (Yes).

Editing an Address Book Record




Example: To edit the phone number of “Tom Carter”

- While the standby screen is displayed, press , use to select the record you want to edit, and then press (Menu).

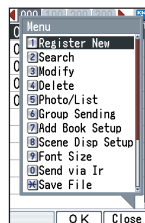

- Press (Modify), and then (Overwrite).

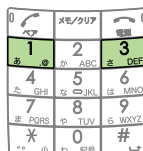


- Use to select “ 0900006XXXX,” and then press (Edit).



- Make the changes you want, press (OK), and then (Reg).


To delete characters, press .

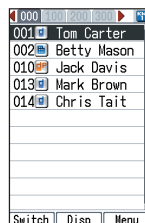

Adding Outgoing or Incoming Record Data to the Address Book



1 While the standby screen is displayed, press , use to select the phone number you want to save, and then press (Menu).

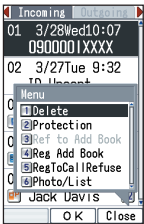


- : Displays outgoing records.
- : Displays incoming records.

2 Press (Reg Add Book).





3 Press (Reg New).

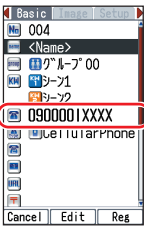
To enter the name, use the procedure starting from step 2 under “Registering an Address Book” (page 42).



Dialing from the Address Book



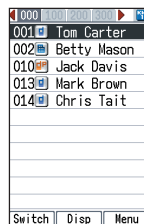

- 1 While the standby screen is displayed, press , and then use  to select the record whose phone number you want to dial.



- 2 Press  (Disp).

The details screen of the record appears.



- 3 Use  to select the phone number, and then press .





Pair Function




You can save up to five phone numbers (like frequently used ones from the address book). You can make calls, send mails to or use Hello Messenger with these saved numbers (called Pair Partners) more easily.

Registering a Pair Partner

1 While the standby screen is displayed, press .



If the Pair Partner is not registered, the confirmation screen appears. Press  (OK). Use  to select the 1 through 5 tab where you want to register the Pair Partner.

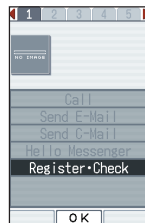


2 Use to select "Register-Check," and then press (OK).



3 Press (Register).

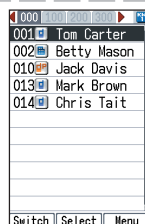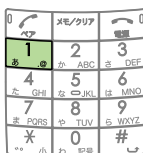

4 Use to select the address book record for the person you want to register as a Pair Partner, and then press (Select).

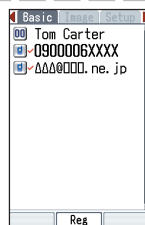


When there is more than one phone number/e-mail address registered in the address book, the Pair Function phone number/e-mail address selection screen will appear.


5 Press (Reg).




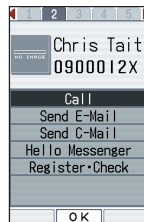
Making a Phone Call, Sending Mail, Inviting a Pair Partner to a Hello Messenger Meeting



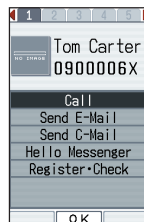

- 1 While the standby screen is displayed, press .






- 2 Use  to select the Pair Partner.

 


- 3 Use  to select "Call," and then press  (OK).



Sending E-mail: After selecting "Send E-Mail" and then pressing  (OK), selecting "Create New" and then pressing  (OK) will display a screen for a composing and sending an E-mail message.

Sending C-mail: Selecting "Send C-Mail" and then pressing  (OK) will display a screen for a composing and sending a C-mail message.

Hello Messenger: After selecting "Hello Messenger," pressing  (OK) will display the screen for inviting a Pair Partner to a Hello Messenger meeting.

For the subsequent procedure, see in "Creating and Sending E-mail Messages" (page 51)/"Creating and Sending C-mail Messages" (page 57)/"Invite the Members to the Meeting" (page 61).

Info

In order to register a person as a Pair Partner, that person's name, phone number, and other information need to be registered in the address book beforehand. Use the procedure under "Registering an Address Book" (page 42) to create the required record before trying to register a person as a Pair Partner.



Your W51CA supports two types of mail:
e-mail and C-mail.

Using E-mail

To use e-mail, you need to subscribe to an EZweb service. If you did not subscribe when you purchased your phone, contact your nearest au shop or the au Customer Service Center.


In addition to an EZweb subscription, you also need to perform an initialization procedure before you can use e-mail. If you have not performed initialization yet, refer to “Initializing E-mail and EZweb” (page 24).

E-mail makes you possible to exchange mails with a PC and with another cellphone that supports e-mail function.

You can send mail messages that contain up to 5,000 double-byte characters (10,000 single-byte characters), and you can attach photos and movies to e-mail messages.

Page 51


- ※ You can send an e-mail up to five addressees at a time.
- ※ You can send up to 1,000 e-mail messages (each addressee counts as a separate message) per day.
- ※ The sending and receiving operations may take longer when a mail message has data attached.

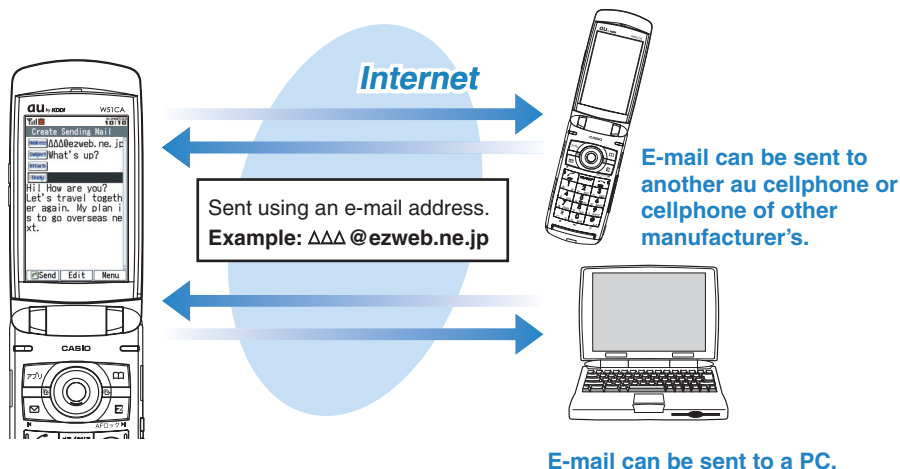

Using C-mail

C-mail lets you exchange text messages that contain up to 50 double-byte characters (100 single-byte characters) with another au cellphone that supports C-mails.

Page 57

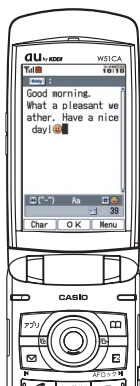

C-mail Center

Sent using a phone number.
Example: 090-0001-XXXX

Received using a phone number.
Example: 090-0002-XXXX



C-mail can be sent to another au cellphone.

About C-mail Safety Block

- C-mail Safety Block blocks C-mails that contain accessing URLs (<http://△△△>, <https://△△△>) or phone numbers in its body text. C-mail Safety Block is set to on by default. If you want to receive C-mails that contain accessing URLs or phone numbers in their body texts, you can disable this function to receive such C-mails.

Creating and Sending E-mail Messages



1


While the standby screen is displayed, press , and then press (Create New).



2

Select , and then press (Edit).

: Address to which the e-mail will be sent.

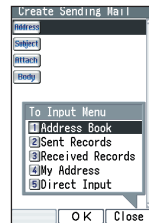

You can send an e-mail up to five addressees at a time.

3


Press (Address Book), use to select an addressee, and then press (Select).



You can select an addressee from sending records, receiving records, or My Address, or you can enter an address.



4

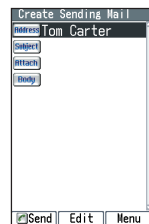


Use to select the e-mail address you want to enter, and then press (OK).




5 Use  to select **Subject**, and then press  (Edit).


Subject: Subject of the e-mail message.







6 Enter the subject, and then press  (OK). Use  to select **Body**, and then press  (Edit).

Body: Body of the e-mail message.

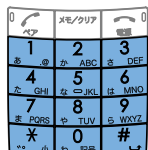

 7 Enter the body text, and then press  (OK).

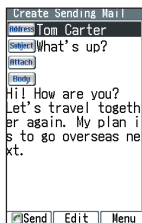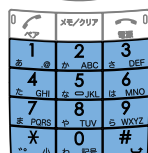

8 Press  (Send) or .

The message "Sent." appears on the display after the e-mail message is sent.




Reading Received E-mail Messages



When you receive an e-mail

The message “ E-Mail” and appear on the standby screen.

Received e-mail icon

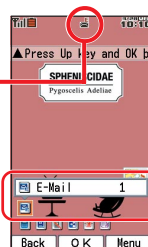

Mail

1

Select “ E-Mail,” and then press (OK).




2

Press (OK).



: Indicates an unread message.

: Indicates an already read message.

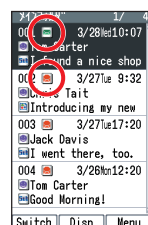

3

 Use to select the unread e-mail you want to view, and then press (Disp).

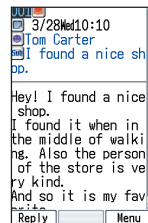

The received e-mail message appears.

If all of the message cannot be displayed, press to scroll.

Use and to scroll between messages.



Press to return to the e-mail message list.


 
Reading an E-mail Message with an Attached Photo or Movie





Example: To see a photo attached to an e-mail.



1

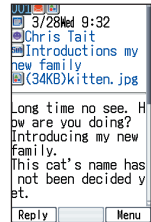Use  to select the e-mail message, and then press  (Disp).





 2

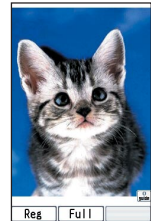Use  to select a file name, and then press  (Play).



Info


- Depending on the size of the photo or movie file, the file may not appear within the mail in step 2 of the above procedure. If this happens, select the file name and press , .
- The sending and receiving operations may take longer when a mail message has data attached.
- Certain signal conditions may also cause e-mail sending and receiving to take longer than normal.


Replying to a Received E-mail Message



To reply to an e-mail message, perform steps 1 through 3 under “Reading Received E-mail Messages” (page 53), and then perform the following steps.

1 Press  (Reply).

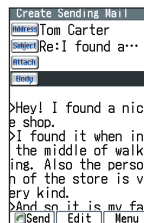

2 Press  (Edit), and then enter the body text.

Subject is prefixed with “Re:,” and the body text of the e-mail is quoted.
For the remainder of this procedure
→ Perform the procedure starting from step 7 under “Creating and Sending E-mail Messages” (page 51).



Avoiding Spam










It is recommended that you use our mail filter function to block spam.

You can use “supportive settings” to easily configure mail filter settings by answering questions that appear on the display.



■ Configuring Mail Filter Settings


Example: To access the “サポート設定” (Supportive settings)

- ① While the standby screen is displayed, press .
- ② Press  (E-Mail Setup) →  (Mail Filter) →  (Yes).
- ③ Use  to select “次へ” and then press  (Select).
- ④ Enter your Security Code, press  (OK).
→ Use  to select “送信” and then press  (Select).
Next, follow the instructions that appear on the display.



■ “カンタン設定” (Simple Settings)


“サポート設定” (Supportive settings)	You can choose filtering options by answering our questions. It is recommendable for those who want to check the filtering conditions one by one.
“フィルターレベル(高)” (Filter level (Strict))	You can block the all incoming mails from PC. It is recommendable for those who use only cellphones to send e-mails.
“フィルターレベル(中)” (Filter level (Medium))	You can block the incoming e-mails from specified senders. It is recommendable for those who are bothered by specified spam senders.
“フィルターレベル(低)” (Filter level (Normal))	You can block the incoming e-mails containing “未承諾広告※” (unsolicited advertisement) in their titles, and “なりすましメール” (spoof e-mail). It is recommendable for all e-mail users.

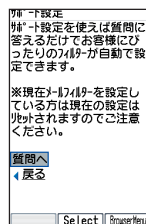



Info


You can prevent spam by changing your e-mail address. See “Changing Your E-mail Address” (page 26) for information about how to change your e-mail address.

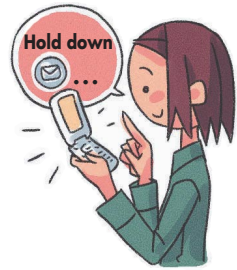Creating and Sending C-mail Messages






1

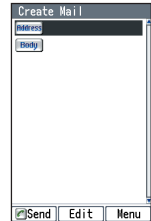While the standby screen is displayed, hold down  for about one second, and then press  (Create New).






2

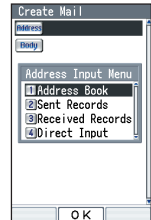Select , and then press  (Edit).



 

3


Press  (Address Book), use  to select an addressee, and then press  (Select).

You can also select a phone number from sending records or receiving records, or you can enter an address.






4

Use  to select the phone number you want to enter, and then press  (OK).

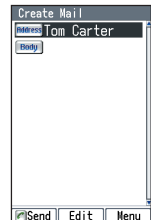

 - 5** Use to select **Body**, and then press (Edit). Enter the body text, and then press (OK).

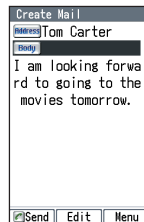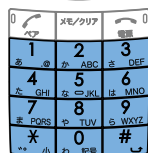

- 6** Press (Send) or .

When the C-mail reaches the other party, the message “Completed.” appears, and the message is stored in your sending records.



Reading Received C-mail Messages

When you receive a C-mail


The message “ C-Mail” and appear on the standby screen.

Received C-mail icon




- 1** Select “ C-Mail,” and then press (OK).

: Indicates an unread message.

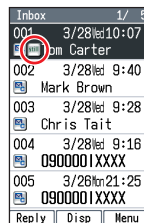

- 2** Use to select the unread C-mail you want to view, and then press (Disp.).


The received C-mail message appears.
Use and to scroll between messages.
Press to return to the C-mail message list.

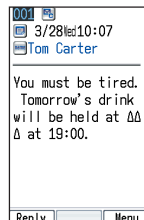

Hello Messenger

“Hello Messenger” is like a portable chat room which allows you to send text, sound and photo in real time to all the chatters (using au cellphone supporting this service).


All chatters are represented by cartoon-style characters they selected. The host can invite up to 4 people from the address book entries.

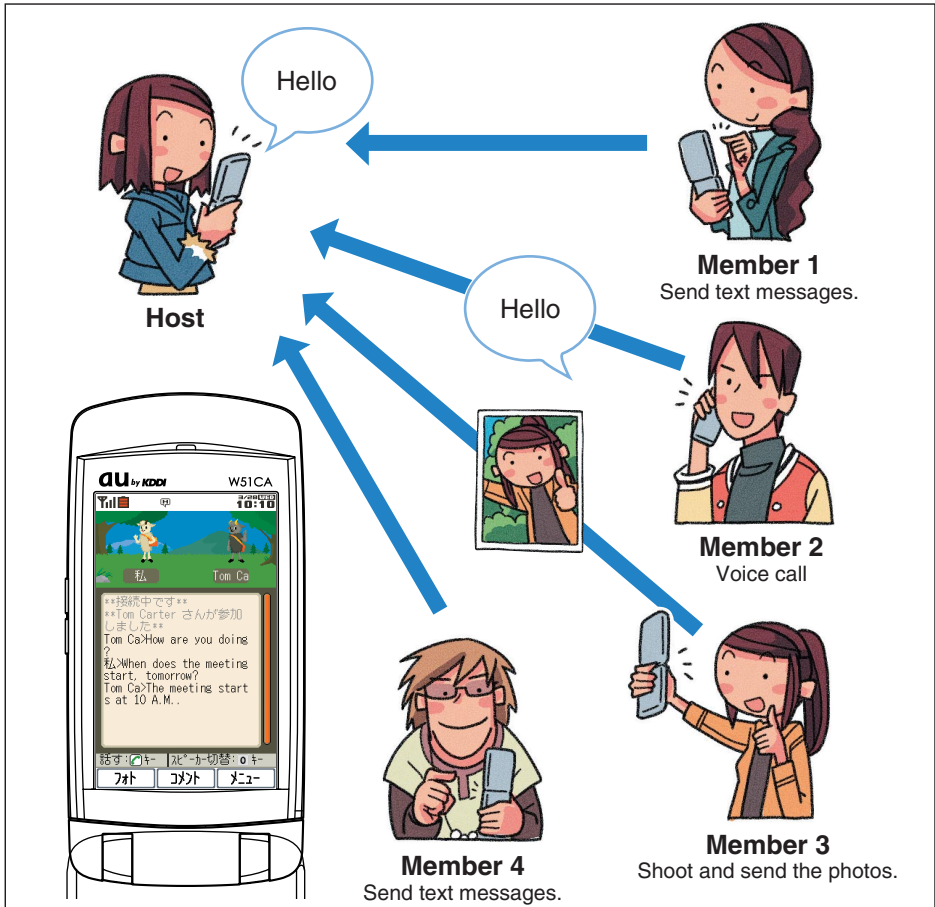



CAUTION

- ◎Due to the conditions like frequent use, location, or signal conditions, the time you can use for meeting may become shorter than usual.
- ◎Two to five people can use this service at the same time.

 
Display the Hello Messenger Menu

- 1** While the standby screen is displayed, press .



- 2** Use  to select “Hello Messenger,” and then press  (OK).




When you start Hello Messenger for the first time, press  (OK) and select your own cartoon-style character, then press  (設定) (Setting).

Item	Outline
スタート (Start)	Select the members to invite to the meeting
コメントログ (Comment log)	Displays Comment log (meeting records)
ヒント (Hint)	Displays operations basics
オプション (Option)	Makes various settings



Character list


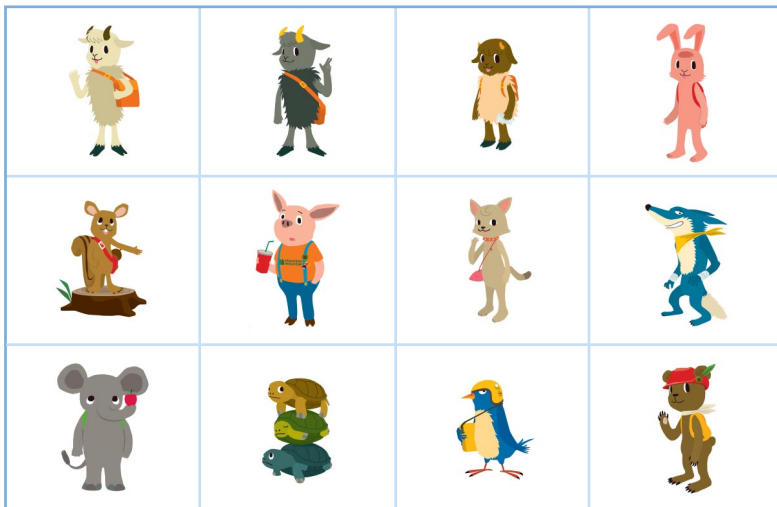
From these 12 original characters, you can select the one as your own character.






Invite the Members to the Meeting

 You can invite the members to start the meeting. To start the meeting, perform steps 1 through 2 under “Display the Hello Messenger Menu” (page 60), and then continue with the following steps.

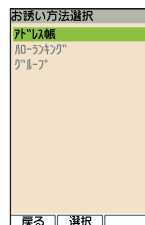
- 1 Use  to select “スタート” (Start), and then press  (選択) (Select).




- 2 Use  to select “アドレス帳” (Address Book), and then press  (選択) (Select). Use  to select the members.



To select the members from the address book entries, perform steps 1 through 2 under “Dialing from the Address Book” (page 46).


- 3 Press  (Select).


“Select Phone Number” screen appears and select the phone number and press  (OK).


The member list appears.

Your name is shown on the top of the list (or “私” (Me) is shown when your name is not registered in the profile).

Your name or “私” (Me) cannot be changed or deleted.


To add members, select the blank column and press  (選択) (Select), and repeat steps 2 through 3.

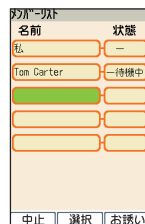

- 4 Press  (お誘い) (Invite).

The member registered in your list gets an invitation message.

When you see “○○さんが参加しました” (○○ joined) appears on the display, you can start meeting with the member.

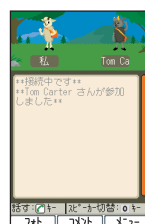

Info

- ◎ You can register the member from “ハローランキング” (Hello Ranking) or “グループ” (Group).
- ◎ You can activate Hello Messenger from address book, outgoing/incoming records, phone number input screen to start the meeting.

When You Get an Invitation Message to Join



When you get an invitation message to join, ring tones sounds or your cellphone vibrates. The invitation screen (inviting you to join the meeting) appears. When you set “着信モード” (Incoming Mode) to “自動応答モード” (Auto Response), no ring tone sounds, and you can start meeting without any operation.

When you get an invitation message to join

The message (inviting you to join the meeting) appears on the display.



1

Use  to select “参加” (Join), and then press .



On the incoming screen, you can see the host's name, total number of the members, and the time of acceptance.



Info

- ◎ When Manner Mode is on, no ring tone sounds from speaker or earphones.
- ◎ Even when Manner Mode is on, the vibrator setting for “ハロー着信音” (Ring Tone for Hello Messenger) has the priority over Manner Mode.

Camera Features

Your W51CA comes with a built-in 2.1-megapixel, 2.07-million effective pixel camera to shoot photos and record movies. You can attach the photos and movies that you shot/recorded to e-mail messages.


Using the Camera

Shooting a Photo (page 65) Recording a Movie (page 66)

1

Use your images for W51CA functions!

You can use photos you shot for the standby screen, for the image that appears while the ring tone is sounding, and in your address book.

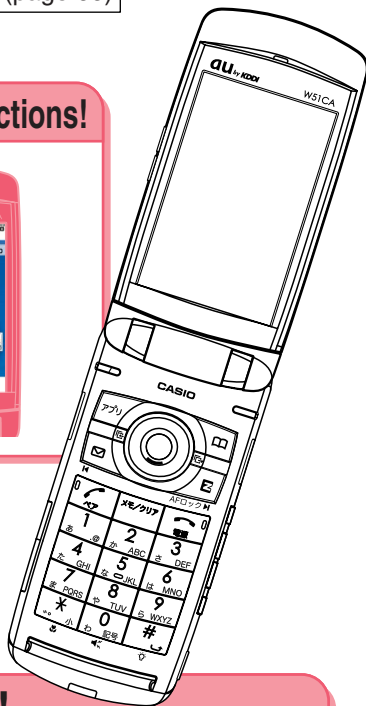


Camera

2

Send images by e-mail!


Within 500KB*, you can send a photo or a movie (shot or recorded with Mail Mode) as an e-mail attachment.


※ Certain signal conditions may cause e-mail sending and receiving to take longer than normal.

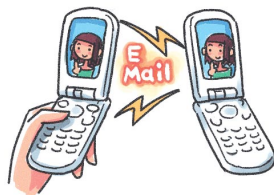


Tips for Better Photos


Shooting with W51CA open

Do not cover the lens or optical sensor with your hands. Hold the camera securely with both hands. Use your thumb to press  (Shutter) to release the shutter.

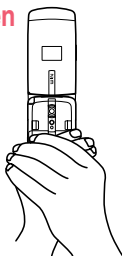

Shooting in the Viewfinder position

 Do not cover the lens or optical sensor with your hands. Hold the camera securely with both hands. Use the index finger of your right hand to press  to release the shutter.



Tips for Avoiding Hand Movement

- Remain steady by keeping your arms lightly against your sides and standing with your feet about shoulder width apart. Having your arms away from your side or extended in front of you can cause blurred images.
- When you press the shutter button, remain still until your shutter tone finishes sounding. This is especially important when shooting where lighting is dim.
- A self-timer is also provided for shooting photos. With the self-timer, you do not need to press the shutter button to shoot a photo, so there is less chance of a blurred image caused by accidental movement of the phone.

Auto focus

W51CA has built-in auto focus function. You can shot photos with the subject properly focused simply by pressing the shutter key.

Photo and Movie Sizes

The following shows the sizes of the photos and movies that can be recorded with your W51CA.

Photo Sizes

Photo Sizes	Where to Save
Phone 120×160	"Photo Folder" in W51CA
Wallpaper 240×320	
WideWallpaper 240×400	
VGA 640×480	"Digicam Folder" in microSD™ memory card
SXGA 1280×960	
WIDE 1600×960	
UXGA 1600×1200	

Movie Sizes

Movie Sizes		Where to Save
Mail Mode	Standard S 96×80	"Movie Folder" in W51CA
	Standard M, High Quality M 128×96	
	High Quality L 176×144	
Video Mode	QVGA 320×240	"Movie Folder" in microSD™ memory card

 


※ The image size is the same as "Wallpaper" when Coupling Shot, Updown Shot, Serial Shot, or Wallpaper is selected as the recording mode.


※ Photos are saved in Data Folder when a microSD™ card is not inserted irrespective of the size of photo or movie.

Camera



Shooting a Photo




- While the standby screen is displayed, press , use  to select "Camera," and then press  (OK).

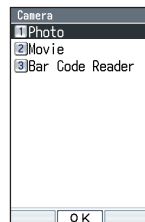

- Press  (Photo).

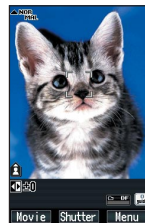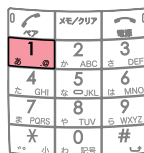


- Point the lens at the subject, and then press  (Shutter).



The phone emits a shutter sound.

Note that the phone emits the shutter sound even if it is in Manner Mode.

You can also press  in place of .

Check the subject through the monitor screen (within the area indicated as ) , and release the shutter.

- Press  (Save).



 
 

The display shows the message

"Saved to data folder (Phone)." and then returns to the photo monitor screen.

Photos you shot are saved to the "Photo Folder," which is in the Data Folder.

Info



○When shot mistakenly

If the photo is not what you want to take, press  /  /  in step 4. Next, repeat step 3 to redo.

Recording a Movie



 - While the standby screen is displayed, press **2**. Use **4** to select “Camera,” and then press **5** (OK).

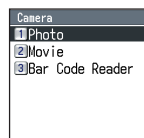

- Press **2** (Movie), point the lens at the subject, and then press **5** (Rec).

The phone emits a shutter sound to signal the start of recording. Note that the phone emits the shutter sound to signal the start of recording even if it is in Manner Mode.

You can also press **5** in place of **5**.



- To stop recording, press **5** (End).

Even if you do not press **5** (End), recording will stop automatically after about 15 seconds. The phone emits a shutter sound when recording stops.



- Press **5** (Save).

The display shows the message “Saved to data folder (Phone).” and then returns to the movie monitor screen. Movies you recorded are saved to the “Movie Folder,” which is in the Data Folder.



Info

○ When recorded mistakenly

If the movie is not what you want to shoot, press **5**, **マナー** or **5**, and then press **5** (Cancel) in step 4. Next, repeat step 2 to redo.

■ Meanings of the Photo Titles

The initial photo mode setting when you purchase your W51CA is “Normal Shot (Wallpaper 240×320).”

Meanings of the Photo Titles in the “Photo Folder,” which is in the Data Folder.

Example of a Photo Title 070328_1010~0001

Date: March 28, 2007

Time: 10:10 a.m.

Serial Number

■ Meanings of the Movie Titles

The initial movie mode setting when you purchase your W51CA is “Mail Mode (High Quality L 176×144).” The maximum recording time in “Mail Mode” is 15 seconds.

Meanings of the Movie Titles in the “Movie Folder,” which is in the Data Folder.

Example of a Movie Title 070328_1010~0001




Date: March 28, 2007

Time: 10:10 a.m.

Serial Number

※ “S_” is added to the beginning of the movie title when the movie size is “Standard S.”

Displaying Key Help

While  (key help icon) is displayed in the lower right corner of the screen, press  to display key help.
Press  again to exit key help.


Shooting Photos and Recording Movies in Viewfinder Position



Perform steps under “Viewfinder Position and Self-portrait Position” (page 22), and then continue with the following steps.






Example: Recording movies in Viewfinder position


 
1

Press  while the standby screen is displayed.






 


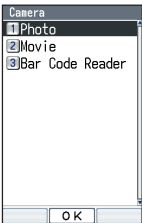2

 
Use   and   to select “Camera,” and then press  (OK).



3

Use   to select “Movie,” and then press  (OK).

To shoot the photo, use   to select “Photo,” and then press  (OK).

 



 



 








4

Point the lens at the subject, and then press (Rec).

The phone emits a shutter sound to signal the start of recording even if it is in Manner Mode.


To shoot the photo, jump to step 6.




Display	Side key operation	Display	Side key operation
 End Camera	 マナー	 Menu	
 End Camera	 マナー (hold down for about one second)	 Quick Play	 (hold down for about one second)
 Wide/Zoom		 Shot/Rec	
 Dark/Light			

5

To stop the recording press (End).

Even if you do not press , recording will stop automatically after about 15 seconds.

 The phone emits a shutter sound when recording stops.







Camera

  6


 

 


Press (Save).

The display shows the message “Saved to data folder (Phone).” and then returns to the movie monitor screen. Movies you recorded are saved to the “Movie Folder,” which is in the Data Folder.

If the recorded movie is not what you want, press  マナー and use  to select “Cancel,” then press . Next, repeat step 4 to rerecord.




Info

- ◎To shoot the photo, hold down  for about one second in step 1.
- ◎Check the subject through the monitor screen (within the area indicated as ) , and release the shutter. First, half-press  (Focus lock is enabled). Then, without releasing your fingers off , full-press the key and shutter releases.
- ◎To shoot the photo, press  in step 6. The display shows the message “Saved to data folder (Phone).” and then returns to the photo monitor screen. Photos you shot are saved to the “Photo Folder,” which is in the Data Folder.
- ◎If the photos is not what you want, press  マナー in step 6.



Viewing Photos and Movies



- 1 While the standby screen is displayed, press **OK**, use **Up** to select “Data folder,” and then press **OK** (OK).


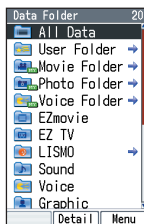


 - 2 Use **Left** to select “Photo Folder,” or “Movie Folder,” and then press **OK** (Detail).

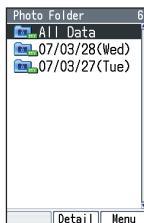

Selecting “All Data” displays a list of all photos and movies in the “Photo Folder” or “Movie Folder.”

 - 3 Use **Left** to select the dated (by recording date) folder, and then press **OK** (Detail).

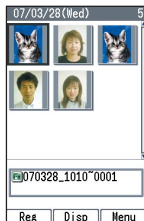

A list of all movies that were recorded on that day are displayed.

- 4 Use **Up** to select the photo or movie you want to play, and then press **OK** (Disp/Play).



The photo or movie displays/plays.

 

※ To pause movie playback, press **OK** (II).

Playback will stop automatically when the movie ends.


Attaching a Photo or Movie to an E-mail Message

Perform the procedure from step 1 to 3 under “Shooting a Photo” (page 65) or “Recording a Movie” (page 66), and then perform the following steps.

1

Press  (E-Mail), and then press  (Attach).


Photos you shot are stored in the “Photo Folder” and movies are stored in the “Movie Folder,” (those folders are in the Data Folder).

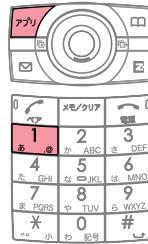

2

Perform the procedure starting from step 2 under “Creating and Sending E-mail Messages” (page 51) to create an e-mail message.

※ A movie attached to an e-mail can be played only on the cellphone that supports movie playback or on a PC.

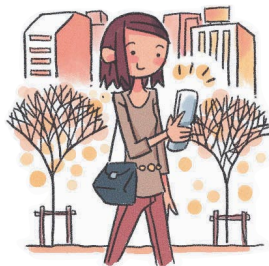


Using EZweb

To use EZweb, you need to subscribe to an EZweb beforehand. If you did not subscribe when you purchased your phone, contact your nearest au shop or the au Customer Service Center.




In addition to an EZweb subscription, you also need to perform an initialization procedure before you can use EZweb. If you have not performed initialization yet, refer to “Initializing E-mail and EZweb” (page 24).

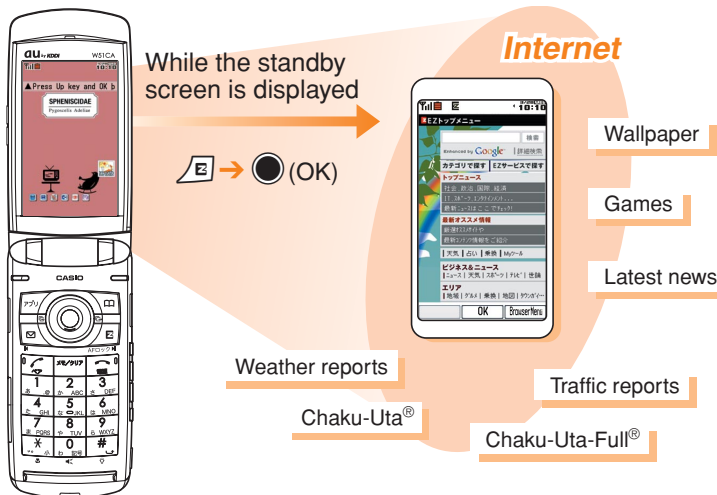
EZweb allows you to access to Chaku-Uta®, the latest news, and other web-based contents.



Displaying the EZ Top Menu

1

While the standby screen is displayed, press , use  to select “EZweb,” and then press  (Top Menu).

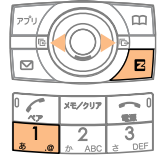

①	キーワード検索機能 (Search by keyword) Provides information search function by keywords
②	カテゴリで探す (Search by category) Searches for a site by category
③	EZサービスで探す (Search by useful EZ services) Introduces useful, amusing and recommended services special to EZweb
④	トップニュース (Top News) Provides the automatically-updated latest top news
⑤	最新オススメ情報 (What's Hot) Introduces various EZweb features and content information
⑥	ディリーツール (Daily Tools) Provides daily information about weather, fortunetelling, etc., along with handy train transfers
⑦	ビジネス&ニュース (Business & News) Provides the latest information such as news, weather, and other information beneficial for business
⑧	エリア (Area) Provides local information about train transfers, map searches, etc.
⑨	ショッピング&オークション (Shopping & Auctions) Provides information about shopping malls where you can purchase goods with your cellphone and the information about the net auction where you can sell or buy easily
⑩	ライフ (Daily life) Provides useful information for daily life
⑪	ホビー&カルチャー (Hobbies & Culture) Provides the latest information about games, music, e-books, and information about hobby and entertainment trends
⑫	コミュニティ (Community) Provides the useful, amusing information that make you feel like using such as SNS, blog
⑬	au My Page Provides a place where you can configure information and tools to suit your needs, and to store large volumes of data.
⑭	au style Introduces au-recommended information and sites
⑮	とくする情報 (Valuable Information) Provides gifts and useful information exclusively for EZweb service subscribers for free
⑯	auお客さまサポート (au Customer Support) Provides phone bills, procedures, au information, and au on-line manuals
⑰	カンタンアクセス・オープンサイト (Simple Access and Open Site) Introduces Simple Access and Open Site
⑱	災害用伝言板 (Disaster Message Board) Registers/checks the safety information in disasters
⑲	ENGLISH Introduces English sites




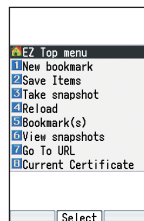
CAUTION

- ◎ The layout and contents of the EZweb screens are example. These are subject to change.
- ◎ Some sites may charge you for the content in addition to call charges.

Bookmarking Sites You Frequently Access



- 1 Display favorite sites you want to bookmark, and press  (BrowserMenu).






- 2 Press  (New bookmark).

※ You may not be able to bookmark some sites.

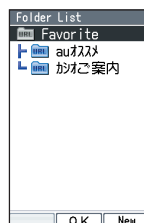


- 3 Press  (Reg).



- 4 Use  to select a folder, and then press  (OK).

 The message "Registered" appears when completed.





Info

 
 
You can have up to 100 sites in the Bookmark(s).


Viewing a Bookmarked Site





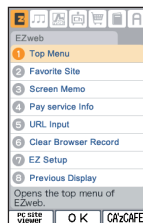- 1 While the standby screen is displayed, press .



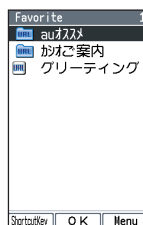

- 2 Use  to select "EZweb," and then press  (Favorite Site).



- 3 Use  to select a site or folder, and then press  (OK).




If you selected a folder, use  to select a site, and then press  (OK).

Downloading Chaku-Uta®

To download a Chaku-Uta®, perform step 1 under “Displaying the EZ Top Menu” (page 73), and then perform the following steps.



- 1 Use to select “カテゴリで探す” (Search by Category), and then press (OK).

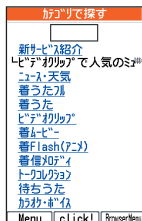

- 2 Use to select “着うた” (Chaku-Uta®), and then press (Select).



- 3 Select the content (desired information site), and download it.

In order to use fee-based contents, you need to enter your EZ Password or Premium EZ Password.

Any 4-digit number you entered on your subscription contract.

Input the required password according to the instructions that appear on the display. To download information, follow the instructions that appear on the display. Downloaded data is stored in the Data Folder.

CAUTION



In addition to call charges, you will be charged according to the pricing policy of each site to download Chaku-Uta® and other contents from a fee-based site.


Info

 
Perform the same procedure to download wallpaper and use it for the standby screen background.

Downloading Chaku-Uta-Full®



- 1 While the standby screen is displayed, press  and use  to select “au Music.”

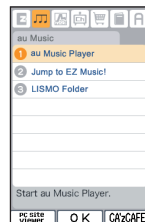

- 2 Press  (Jump to EZ Music!).

This operation connects the phone to “EZ Music!” For the operations after connecting, follow the instructions displayed on the screen.

In order to use fee-based contents, you need to enter your EZ Password or Premium EZ Password.

Any 4-digit number you entered on your subscription contract.



Info


You can also download Chaku-Uta-Full® by selecting “着うたフル” (Chaku-Uta-Full®) in step 2 under “Downloading Chaku-Uta®” (page 76).


Checking Charges

You can check call and transmission charges.




1 While the standby screen is displayed, press .

When the EZweb connection confirmation screen appears, press  (Yes).

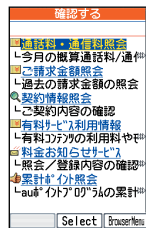

 2 Use to select the item you want to check, and then press (Select).



EZ Channel-Plus/EZ Channel

EZweb subscription required


EZ Channel-Plus/EZ Channel provides the latest programs you registered to download. Each updated content is automatically downloaded to your W51CA.

■ Displaying EZ Channel-Plus/EZ Channel Menu




Standby screen

Press .

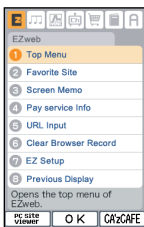

EZweb menu

Use to select
“ EZ Channel-plus.”

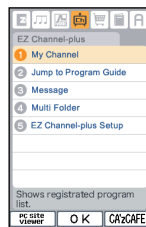

EZ Channel-Plus menu

■ Enjoying EZ Channel-Plus/EZ Channel

① Register the programs you are interested in.

You can register up to 16 programs (up to 3 programs with EZ Channel) from “Jump to Program Guide.”

Registered programs are downloaded automatically since late at night to early morning, and then saved in “My Channel.”

※ The number of programs you can save may vary according to Data Folder memory status.



© KDDI

② Playback the program.

You can watch the program saved in “My Channel” whenever you want.




© KDDI

③ Save the program.

When a registered program is updated, the program is overwritten with new one. You should save the programs you do not want to delete in “Multi Folder” etc.

※ In some cases, you may not be able to save a program because of copyright protection.

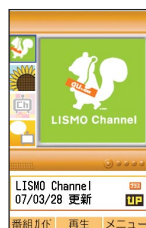

Info

- ◎ To register EZ Channel-Plus programs, you need to subscribe Packet Communication Flat Rate Service.
- ◎ You need to perform an initialization procedure before you can use this service. If you have not performed initialization yet, refer to “Initializing E-mail and EZweb” (page 24).
- ◎ With EZ Channel service, each program may consist of large amounts of data (up to approximately 5MB). To cut cost, you may want to subscribe to the Packet Communication Flat Rate Service.
- ◎ When the scheduled delivery time comes, the programs are automatically downloaded. Turn on the cellphone with its battery pack full, and put it in the area with good reception.
- ◎ The display layout and contents are examples. These are subject to change.

EZ Navi Features

EZweb subscription required

EZ Navi uses global positioning system (GPS) information to provide you with useful information.




Standby screen

Press .



EZweb menu

Use  to select "EZnavi."

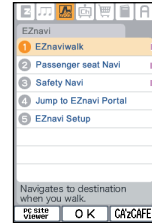

EZ Navi menu

Checking your route: “EZ助手席ナビ” (Passenger Seat Navi)

This service provides route information (by voice and map) to a person in passenger's seat.




When you check where your child is: “安心ナビ” (Safety Navi)

“Safety Navi” apps is composed of following three functions:

“Auto Position Search” (paid), “Position Search Mail” (free), “Area Message” (free).

These functions enable you to check the location of an au cellphone supporting “Safety Navi” and receive an alert mail which is sent to a particular au phone whenever another phone enters (or is inside of) or exits (or is outside of) a preset area by operating W51CA.

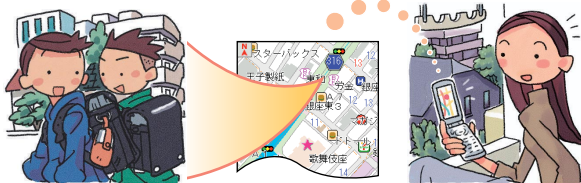

“EZ Navi Walk”

A menu of useful options you can use while you are out.



ナビをする* (Navigation)	Searchable source of a route guidance (voice navigation) to your destination, shops, and facilities
地図を見る (free)* (View Map)	You can view a map of your current location or any other location.
乗換検索する (free ^{※1})* (Search Connection)	Searchable source of train transfer and timetable information
道路情報を見る (View Traffic Info)	Check real-time traffic information on the major roads all over Japan.
もっとナビウォーク (EZ Navi Walk)	Provides explanations about each setting or search on PC.
インフォメーション (Information)	You can register for memberships or make inquiries.

The star symbol shows that you can use your voice to enter search terms. This is called “voice input” function.


※1 You are charged a fee for some services.

“Transfer Search”



Only to enter the station names at which you get on the train and off, you can find the information such as the rail line names, the station name where you change the train, a time table, and the time required. You can find a timetable of the starting train and the last train.

“3D Navi”

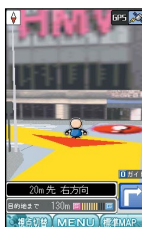

The display is switched to the 3D image at the guidance point or a point near the destination.

Navigation engine by NAVITIME JAPAN
地図：昭文社／住友電工
3Dデータ：ゼンリン／
ジオ技術研究所
Z06A-第2137号

“View My Position”



Simply select View My Position to display your current location on a map in real time.

Your initial location is indicated by ★. Changes in your location are indicated in real time by 🚶.

“Mail My Position”



You can e-mail a map of your current location to another phone.

Info

- In addition to packet communication fee, you may be charged some other fees for using EZ Navi.
- The display layout and contents are examples. These are subject to change.
- 3D Navi look straight ahead wherever you turn to.
- Because 3D Navi displays a map, packet communication fee is high.
- You can use 3D Navi in the area along the street within a radius of 50 meter from a main crossing in 23-ward area and some major cities designated by government.

Safety Navi Features

EZweb subscription required

You can check the location of another au phone and receive a notification message when you enter or leave a specific area during a predefined time period by your operation of W51CA.

1

“いつでも位置確認” (Auto Position Search)



Example: When the mother sent a mail to her child

Features

- You must register each other's information in both cellphones beforehand. When mother searches for child's position, W51CA automatically shows the child's current position without operations from the child.

Notice: The monthly fee is charged separately.

2

“エリア通知” (Area Message)



Example: When the mother checks the area her child is in

Features

- A message is automatically sent from the child's au cellphone to the mother's, when the child is getting to (or staying in) the pre-specified area in the pre-specified period of time. Notification is also available when the child is getting (or being) out of the pre-specified area.

3

“位置確認メール” (Position Search Mail)



Example: When the mother sent a mail to her child

Features

- By sending e-mail from mother to child, she can confirm the child's position.
- When child's number is saved in Address Book, mother can confirm the child's position easily without membership registration.**

Notice: When confirming, this service requires child's operations.

Info

- ◎ Safety Navi services are available only among the cellphones supporting these feature.
- ◎ Before you can use Safety Navi, the phone numbers of the cellphones must be recorded in the address books of both of the cellphones.
- ◎ Before you can use Safety Navi, you need to agree the terms of use that appears the first time you start it up and you must register a password.
※ Agreement of the terms of use is required for both sides.
- ◎ The wrong location may be displayed in areas where GPS reception is poor, underground, inside of a building, or in areas surrounded by buildings.
- ◎ Area Message may not be able to send alerts properly in cases where correct location information cannot be obtained.
- ◎ When the other party is out of range, set to “reject,” no application, operating, or using a cellphone not supporting this service, you cannot check the location.
- ◎ If you are subscribed with “料金安心サービスご利用停止コース” (which suspends service when a preset amount is reached), this service is not available if you exceed your limit amount.
- ◎ The screen is an example, and may differ from the actual display.
- ◎ Safety Navi features cannot be used while C-mail is disabled or when EZ apps Restrict is selected.
- ◎ Free calling time provided by your service plans can be applied to EZ apps transmission charges. However, Family C-mail Service or Packet Communication Discount Service does not apply to EZ apps transmission charges.
- ◎ Location information acquisition and map display are subject to information charges in addition to packet communication charges.

EZ FeliCa is a service available for the cellphones loading the technology of contact-free IC cards called FeliCa. Simply by holding W51CA over reader/writer (external device)*, you can use W51CA for shopping by using e-money or credit card or use it as member's cards, point cards, a discount coupon, and so on. When you use EZ FeliCa, you need to download the applications from the provider of the service you want to use.

“QUICPay” (クイックペイ) is prepared at the time of purchasing.

→ “Using FeliCa-supported EZ Apps” (page 87).

※ Devices on the electronic cash registers at stores, etc, that exchange data between FeliCa chips

EZ FeliCa Features

Member's Card

Available as member's cards or point cards.

Transportation Ticket


With your W51CA, you only need your cellphone for the use of public transportation.



You can check the history of use or the balance on the display of the cellphone.

Shopping

You can shop using the e-money or credit card functions of your cellphone.

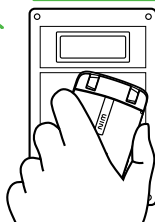

Coupon

You can get the information about a coupon such as discount at shops and use it.

au network




You can make online charge or perform various procedures anytime, anywhere.

Notes on Using EZ FeliCa

- Keep your W51CA safe. In case your cellphone is lost, please contact the service company for details about EZ FeliCa-supported service.
- We recommend that you set FeliCa Lock or Remote Auto Lock in case of loss or theft.
- We accept no responsibility for loss or damage of your data caused by theft, loss or malfunction of your W51CA.
- Your security codes and passwords needs to be highly confidential and protected.
- Contact the service company for further details about FeliCa-supported EZ apps.
- Even when your W51CA supports EZ FeliCa service itself, some services may be unavailable. For details, contact the au Customer Service Center or visit au website.
- Some of the EZ FeliCa service are subscription dependant.
- For details about each service, contact the EZ FeliCa service provider.
- Contents provided by each service are subject to change without notice.
- Cellphones supporting each service are subject to change without notice.


Communicating with Reader/Writer

You can use EZ FeliCa simply by holding the FeliCa mark over reader/writer.

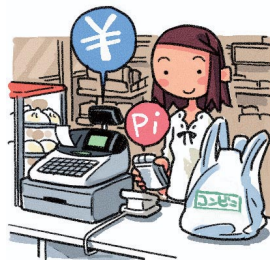

1


Hold the FeliCa mark of W51CA over reader/writer.

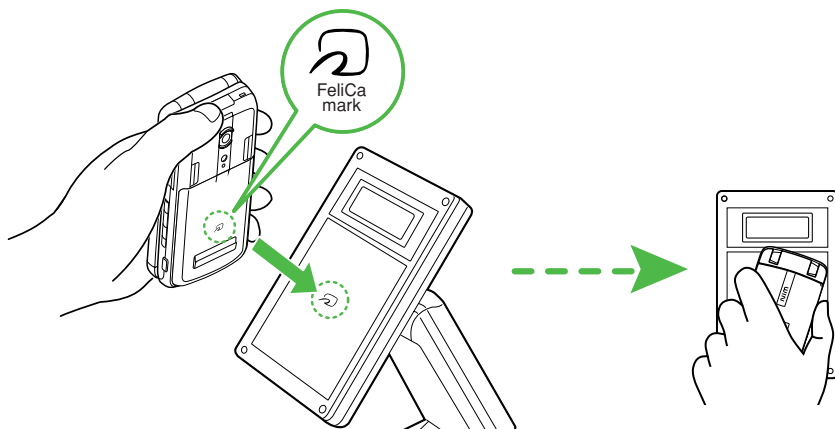


Info



- ◎ You can use EZ FeliCa without starting FeliCa-supported EZ apps.
- ◎ EZ FeliCa is available even when the power is turned off. However, while FeliCa Lock is active, or the battery level is very low, you may not be able to use EZ FeliCa.
- ◎ Be careful not to bump the FeliCa mark against reader/writer when holding over.
- ◎ Bring the FeliCa mark close to reader/writer slowly when holding over.
- ◎ If the FeliCa mark can not be read when holding over, move W51CA all around over reader/writer.

 

Setting FeliCa Lock

You can restrict the use of EZ FeliCa by setting FeliCa Lock on. You can temporarily release the FeliCa Lock and use EZ FeliCa for a certain period of time by holding down  for about one second while the standby screen is displayed and entering the lock No. (quick release).


1 While the standby screen is displayed, press .

4 1 4 1
た GHJ あ @ た GHJ あ @

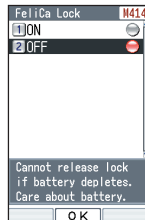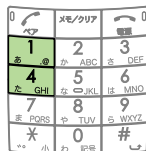

2 Press  (ON), enter the lock No., and then press  (OK).


The FeliCa Lock is set.

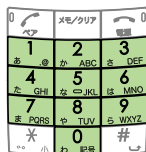

CAUTION


If the battery discharges while the FeliCa Lock is on, you will be unable to release the FeliCa Lock. Be careful of the battery level. When your battery is discharged, recharge the battery and then release the FeliCa Lock to use EZ FeliCa.

Info

- When FeliCa Lock is set,  appears on the standby screen.
- In case you lost W51CA, you can set the FeliCa Lock by setting Remote Auto Lock. Remote Auto Lock requires the initial setup beforehand.
- Even if you set Auto Lock, the FeliCa Lock will not be set.




Releasing FeliCa Lock temporarily (quick release)

When the FeliCa Lock is on, hold down  for about one second while the standby screen is displayed, enter the lock No., and then press  (OK).

The vibrator works, "FeliCa Lock Quick releasing" is displayed and the FeliCa Lock is temporarily released.




Info

- If you press  or when "Quick Release" (about 5 minutes is set at the time of purchasing) elapses, W51CA returns to FeliCa Lock status.
- You cannot start FeliCa-supported EZ apps while FeliCa Lock is temporarily released.


Using FeliCa-supported EZ Apps

“QUICPay” (クイックペイ) is prepared as FeliCa-supported EZ apps in W51CA at the time of purchase.

■ Starting FeliCa-supported EZ apps

- While the standby screen is displayed, press , use  to select “EZ FeliCa” and then press .

EZ FeliCa menu appears.

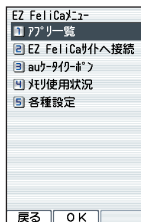

EZ FeliCa menu

- Press  (アプリ一覧) (EZ apps List).

The list of the FeliCa-supported EZ apps saved in W51CA is displayed.
Select the EZ app you want to start.

 


Using au Keitai Coupon (ケータイクーポン)

au Keitai Coupon (ケータイクーポン) is the function that allows you to get an information about coupon and also save it only by placing it over the reader/writer of supporting stores.

■ To display au Keitai Coupon (ケータイクーポン) menu

Perform step 1 under “Starting FeliCa-supported EZ apps” (Page 87) and then perform the following steps.

- Press  (au ケータイクーポン).



Info

- An information about coupon can be downloaded from an e-mail, EZweb, etc.
- An information about coupon can be send to your friends using e-mail, infrared communication, etc.

EZ Television (1Seg)

EZweb subscription required

“EZ Television (1Seg)” is EZ apps (BREW®) which supports “1Seg” service (terrestrial digital TV broadcasting designed for cellphones or other portable terminals).

EZ Television (1Seg) Features

Using “EZ Television (1Seg),” you can enjoy “1Seg” service (terrestrial digital TV broadcasting designed for cellphones or other portable terminals) on your W51CA. Besides the ability to receive a variety of broadcasts, several recording features are also available. You will be able to record movies, capture screens (to save them as still images) or download electronic program guide (EPG).

1

Switching between Data Broadcasting Mode and TV Broadcasting Mode

Watching data broadcasting programs



Data broadcasting screen

Watching TV programs



TV broadcasting screen

⏮ (戻る) (Return)



⏭ (機能) (Function)



2

Recording Movies or Capturing Screens



Menu screen

Use  to select
“録画／キャプチャ”
(Record/Capture)
→ ● (選択) (Select).

Next, continue from step 3 of the procedure under “Recording Movies from TV Programs” (page 93).

Terrestrial Digital TV Broadcasting

Terrestrial digital TV broadcasting (provides digitalized contents of the existing analog TV broadcasting) was launched in Japan in December 2003.

Terrestrial digital TV broadcasting designed for cellphones or other portable terminals is called “1Seg” service (not includes terrestrial digital TV broadcasting service for household TV). EZ Television (1Seg) allows you to enjoy the “1Seg” service. You can receive the terrestrial digital TV broadcasts through a UHF antenna.

■ Before using a TV antenna

When you use EZ Television (1Seg), fully extend the TV antenna to get a signal.

※ To avoid damage, always extend it straight and check the direction of the antenna tip so that it snaps into place properly.






 
- You need to perform an initialization procedure before you can use EZ Television (1Seg). If you have not performed initialization yet, refer to “Initializing E-mail and EZweb” (page 24).
- No packet communication or other communication fees are charged for watching programs (EZ Television (1Seg) offer). However, you will be charged for packet communication if you download an electronic program guide (EPG) or use the song title search function (paid service).
- No packet communication or other communication fees are charged for watching data broadcasting programs. However, you will be charged for packet communication if you use the interactive service provided by data broadcasting programs or access to the information site on EZweb.
- EZ Television (1Seg) is unavailable after canceling your W51CA service.
- You are unable to start EZ Television (1Seg) when remaining battery level indicated as or .
- When remaining battery level shows during EZ Television (1Seg) is active, a message (indicating the battery will be soon discharged) appears, and automatically stop EZ Television (1Seg).
- The continuous broadcasting time provided by W51CA is approximately 5 hours and 30 minutes.* However, it depends on the factors such as frequent operations performed during data broadcasting programs.
 - ※ The time mentioned above is measured under the following conditions:
 - Display: Full-screen display Earphone volume level: 10
 - Brightness level: 3 (“明るさ 3” in “画質調整設定” (Picture quality settings))
 - Caption: OFF (“字幕OFF” in “字幕設定”(Caption settings))
- The W51CA may fail to receive radio signals properly depending on the location or radio wave receiving conditions. In this case, the quality of the picture or the sound may be lower than usual or not available.
- The display layout and contents are examples. These are subject to change.
- “1Seg” service (terrestrial digital TV broadcasting designed for cellphones or other portable terminals) has been launched in the Kanto (Tokyo), Chukyo (Nagoya), Kinki (Osaka), and other areas on April 1, 2006. For details on “1Seg” service, please visit the website below.
The Association for Promotion of Digital Broadcasting (D-PA):
<http://www.d-pa.org/> (For PC)
<http://www.d-pa.org/1seg/k/> (For Callphones)

Watching EZ Television (1Seg)

When you use EZ Television (1Seg) for the first time, make the necessary settings as follows.








- 1 While the standby screen is displayed, press , use  to select “TV,” and then press  (OK).




- 2 Press  (EZ TV(1Seg)).

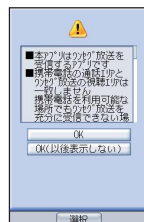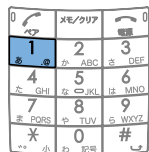

The precautions appears.
If you select “OK(以後表示しない)” (OK “Not display hereafter”), they will not appear after the next time.





- 3 Use  to check the precautions, and then use  to select “OK,” and press  (選択)(Select).

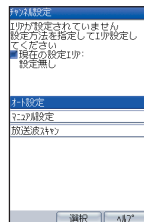The initial settings screen for EZ Television (1Seg) appears.
Follow the instructions displayed on the screen, and channel settings screen appears.





 - 4 Use  to select “オート設定” (Automatic Settings), and press  (選択)(Select).

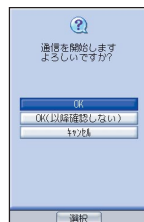When you set area settings manually, select “マニュアル設定” (Manual Settings).




5

Use  to select “OK,” and press  (選択)(Select).












The coverage areas and channels you can receive are automatically set, TV broadcasting screen appears. If you select “OK(以降確認しない)” (OK “No confirmation hereafter”), the transmission confirmation screen will not appear after the next time.

Info

- ① You may want to try again to select the channel settings (see step 5) due to the early stage conditions for “1Seg” service (terrestrial digital TV broadcasting designed for cellphones or other portable terminals).
- ② When you start EZ Television (1Seg), it may take longer to be able see TV programs or the data acquired by data broadcasting programs (one of the characteristics of digital broadcasting).
- ③ While the standby screen is displayed, you can also press  to start EZ Television (1Seg).
- ④ When you use EZ Television (1Seg) after the first time, the last channel you selected broadcasts on the screen. When you are unable to get a signal or set appropriate coverage areas, make channel settings again.

Switching between earphone and speaker


- ① While EZ Television (1Seg) is active, press  (機能) (Function).
- ② Use  to select “字幕／音声” (Caption/Sound), and press  (選択) (Select).
- ③ Use  to select “音声設定” (Sound Settings), and press  (選択) (Select).
- ④ Use  to select “音声出力先設定” (Sound Output Settings).
Use  to select “オート” (Auto), “スピーカー” (Speaker) or “イヤホン” (Earphone), and press  (設定)(Setting).
- ⑤ Press  (選択)(Select).

Info

The initial setting is “オート” (Auto).

Watching EZ Television (1Seg) Using Viewfinder Position

After making initial settings for EZ Television (1Seg), you can watch TV programs with your W51CA set in Viewfinder position. You can enjoy TV programs and charge the battery at the same time (placing your W51CA on the desktop holder with Viewfinder position). Perform steps under “Viewfinder Position and Self-portrait Position (page 22),” set your W51CA in Viewfinder position, and then continue with the following steps.

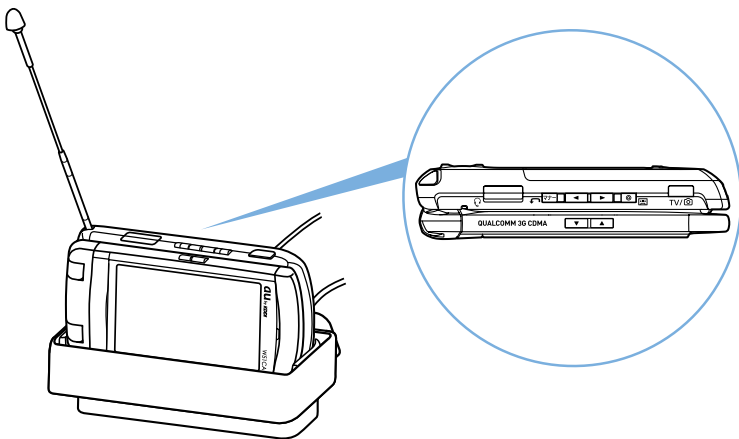

1 While the standby screen is displayed, press .



2 Use to select a channel.




 
Key assignments with Viewfinder position

	Adjust the volume	(hold down for about one second)	Stop EZ Television (1Seg)
	Select the channel		Capture screen
(hold down for about one second)	Pause/Time Shift Playback	(hold down for about one second)	Start recording
	Switch the broadcasting mode		Switch the screen



Recording Movies from TV Programs

 
1

Press  (機能) (Function) on the screen (Data/TV broadcasting screen) during TV programs.




2

Use  to select “録画／キャプチャ” (Record/Capture), and press  (選択) (Select).




3



 Press  (録画開始) (Start Recording).



Recording starts.

During recording the movies, when you press  (画像保存) (Save as Still Images), you can capture screen and save as still images (up to five still images). The captured still images are saved to “Graphic” folder in Data Folder.

4

Press  (録画停止) (Stop Recording), and then press  (選択) (Select).




The recorded data is saved to the “EZ TV” folder in the Data Folder.

When the maximum recording time elapses, recording stops and the recorded data is saved automatically.








Info

- In step 3, press  (画像保存) (Save as Still Images), use  to select “はい” (Yes), and press  (選択) (Select). Then you can save displayed images on the screen as still images.
- EZ Television (1Seg) allows you to reserve recording of the program by using electronic program guide (EPG).


 
 
Info


- Ⓢ Hold down  for about one second on TV broadcasting screen during TV programs, you can record movies during TV programs.
- Ⓢ Movies are saved to the “EZ TV” folder and still images are saved to the “Graphic” folder in the Data Folder. Movies can also be saved to microSD™ memory card with proper settings.
- Ⓢ Recording may be unavailable when the Data Folder does not have enough capacity.
- Ⓢ Recording times varies depending on the remaining capacity of the Data Folder. Maximum recording times with maximum remaining capacity of the Data Folder (approximately 30 MB) are about 10 minutes. This may vary by the amount of the broadcasted contents.
- Ⓢ The file name of the saved still image is “DTV_保存年月日_保存時刻~連番” (DTV_capturing date_capturing time~serial number).
Example: For the first data saved at 10:10 a.m. on March 28, 2007
DTV_070328_1010~0001
- Ⓢ The name of the saved movie file is “番組名+録画年月日” (program name + start recording date).
Example: For the data “△△△△△△” recorded on March 28, 2007
△△△△△△070328
- Ⓢ Still images or movies, captured or recorded from a TV program, are protected by the copyright laws. Captured still images are not available for e-mail attachment, copying or moving to microSD™ memory card. Recorded movies cannot be copied but can be moved to microSD™ memory card.
- Ⓢ EZ Television (1Seg) allows you to find TV programs from a downloaded electronic program guide (EPG) or search a title of the song you heard during the programs (song title search function: paid service).

■ Watching movies recorded from TV programs

- ① Press  while the standby screen is displayed, use  to select “Data folder,” and then press  (OK).
- ② Use  to select “EZ TV” and press  (Detail).
- ③ Use  to select a movie recorded movie from TV programs, and then press  (Play).

Stopping EZ Television (1Seg)

 1 Press  /  (hold down for about one second), and then press  (Stop).




The W51CA allows you to listen to the FM radio.

Before using an antenna

Casio round-type earphone jack conversion adaptor 01 and MDR-E0931 by SONY have a built-in antenna to get a signal.

When you listen to the EZ•FM, connect Casio round-type earphone jack conversion adaptor 01 and MDR-E0931 by SONY to get a signal.

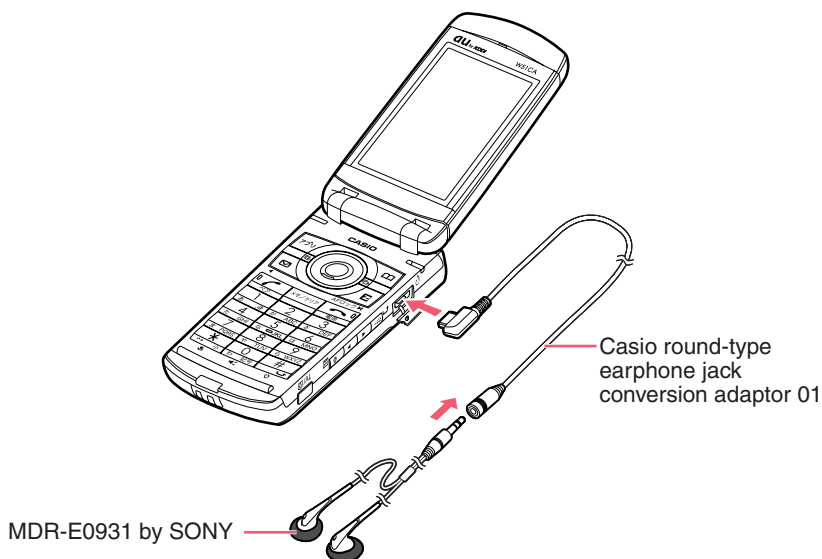






Info

- ◎ When you use Casio round-type earphone jack conversion adaptor 01, pull out the connector straight to the flat-type earphone-microphone jack.
- ◎ Because the cable of Casio round-type earphone jack conversion adaptor 01 and MDR-E0931 by SONY work as an antenna, do not remove it when you listen to EZ•FM with speaker.


 

Listening to the EZ-FM



- 1 While the standby screen is displayed, press , use  to select “Music/Radio,” and then press  (OK). Press  (EZ-FM).

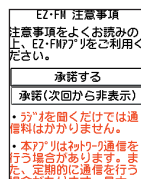

The precautions appear.

- 2 Use  to check the precautions, use  to select “承諾する” (Accept), and press .



EZ-FM screen

The EZ-FM screen appears.
When you use EZ-FM for the first time, area selection screen appears.
Select an area where you use the EZ-FM.

Info

- ◎When you use EZ-FM for the first time, perform the EZweb initialization procedure.
If you have not performed initialization yet, refer to “Initializing E-mail and EZweb (Page 24)”.
- ◎No packet communication fees are charged for listening EZ-FM.
However, you will be charged for using display the song title service provided by EZ-FM apps.
- ◎The display layout and contents are examples. These are subject to change.
- ◎When you listen to the EZ-FM indoors, the antenna is easier to catch a radio wave by the window.

■ Viewing and Operating the EZ•FM



EZ•FM screen

Icons appear if downloadable information is provided.

Radio frequency

Displaying changeover speaker/earphone

Radio station/Song title

Banner

Main Operations:

Key	Operation
	Switches radio stations. * Press to to switch to a radio station which is set to each key.
→	Tunes in on the station by 0.1 MHz. * Press for more than one second and tuning starts automatically. Press to to input the radio frequency directly.
/	Increases the volume.
/	Decreases the volume.
	Stops EZ•FM. * Use to select "Stop," and then press (OK).

Listening to the EZ•FM as a BGM/ Stopping the EZ•FM

Suspends/stops the EZ•FM apps. Even after suspending the EZ•FM apps, you can listen to the EZ•FM as a BGM.


1 Press on the EZ•FM screen.



2 Press (Shift to BGM) or (Stop).

Shift to BGM : Although the EZ•FM apps pauses, you can continue listening to the EZ•FM.

Stop : Stops the EZ•FM.

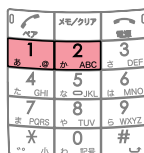

Info

EZ•FM apps automatically stops after 2 hours at the time of purchasing. You can change the setting of “ラジオ自動終了” (stopping radio automatically) in “ラジオ機能設定” (radio function/setup).

PC Site Viewer Features

EZweb subscription required

To use the PC Site Viewer, an EZ WIN course subscription is required. If you did not subscribe when you purchased your cellphone, contact your nearest au shop or the au Customer Service Center. Using the PC Site Viewer, you can comfortably view the WEB sites just like those you usually view with your PC, by high speed packet communication of 2.4 Mbps receiving at maximum.

1

You can view WEB sites for PC with W51CA

A WEB site for PC



Viewing a site with PC Site Viewer



Info

The content displayed is an example, and it may differ from the contents that actually appear on the display of your phone.

If you set the "Display mode" to "SSR," a WEB site is displayed adjusted to the size of W51CA screen.

If you set the "Display mode" to "Desktop," the portion of the page laid out by PC screen is displayed.

2

You can display/automatically-update a portion of WEB site information. "Using PointCast" (page 101)

Registering to "PointCast"



Displaying as "Standby screen"



Select a portion of a WEB site page beforehand, and then register it to "PointCast."


Display a portion of a WEB site page, and you can automatically-update it at specified intervals.

Info




If you press (Launch) while "PointCast" is displayed, you can display from the top of the page with a full-screen and operate the PC Site Viewer in the same way as the usual browsing.

PC Site Viewer

Mastering Operation Basics

- 1** While the standby screen is displayed, press .



- 2** Use  to select “PC site viewer,” press  (OK), and then press .


Warning message on packet communication appears.






- 3** Press  (Home page).

The initial setting is “DUOGATE” (<http://duogate.jp/>).

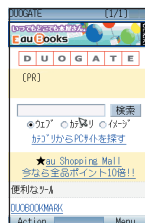※ The contents displayed on the right is an example, and it may differ from the contents that actually appear on the display of your phone.



- 4** Press .


If you select a link using  to move , the pointer changes to .

Pressing  (Select), the linked page appears.



Info

In step 2 of the above procedure, search tool appears. You can enter keywords in search window, and select “Search” to find the desired page.

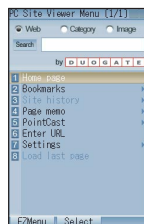


Using PointCast

You can set a portion of a WEB site as the standby screen. You can set it to be automatically-updated at specified intervals.

When a specified time elapses on the standby screen, the WEB site selected by “PointCast” is displayed.


To use “PointCast”, perform steps 1 through 4 under “Mastering Operation Basics” (page 100), and then perform the following steps.




1 Display your favorite page, and then press  (Menu).




2 Press  (PointCast).

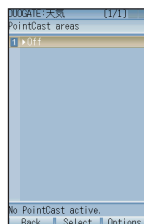

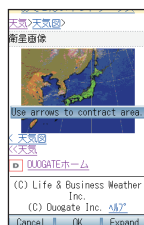


3 Press  (Options), and then press  (New).



4 Press  (OK) twice.


If you press , you can shrink the area displayed by “PointCast”.

 If you press  (Expand) and press , you can enlarge the display area.


※ If you press  (Contract) again, you can shrink the display area.



5 Press **●** (Edit), enter the title, and then press **●** (OK).

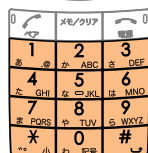

6 Press **□** (Add), and then press **□** (Activate).

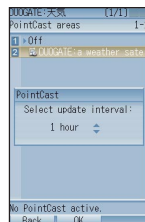

7 Use **↑/↓** to select the interval to update the standby screen.



If you select the interval to automatically-update the page displayed as the standby screen from among “24 hours/12 hours/8 hours/4 hours/2 hours/1 hour/30 min/Never”, and press **●** (OK), then “PointCast message” appears. Press **□** (OK), and then press **●** (OK) to complete the setting.

CAUTION

◎ Precautions for using packet communication for PC Site Viewer
We recommend that you subscribe to Packet Communication Discount Service as the transmission fee may be quite high by performing a large-size communication such as viewing homepages that include large images.

Also, be careful that packet communication fee will be charged for each updating if you set automatic-update by “PointCast.”

◎ Checking current packet communication charges

You can use the Charge Reference Service (which shows a rough estimate of the current month's discounted packet communication charges as of yesterday or the day before) to check the status of your current charges.

PC ⇒ <http://my.kddi.com/> (MyKDDI)

※ Subscription is required before you can start using this service.




au phone ⇒ **☎** → “Top Menu” → “auお客さまサポート” (au Customer Support)


 
Simple Mode

 
 
 
Simple Mode lets you limit operations to the telephone function, address book, camera, e-mail, C-mail, EZweb, and other frequently used functions, which simplifies operations.






Entering Simple Mode


- While the standby screen is displayed, press , use  to select "Settings," and then press  (OK).

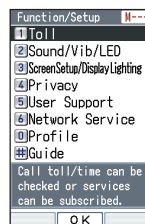

 - Press  (User Support),  (OperationSupport), and then  (Mode Setup).

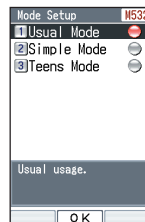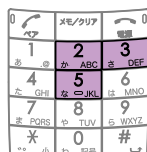


- Press  (Simple Mode).

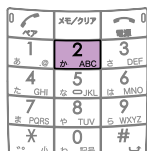




Info



- The lock No. is required when changing from Teens Mode to Simple Mode.
- When you enter Simple Mode, settings configured in Usual Mode are automatically changed to those configured in Simple Mode.

Exiting Simple Mode

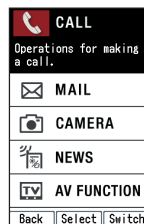
- 1 While the standby screen is displayed, press .



 - 2 Use  to select "SETTINGS," and then press  (Select).

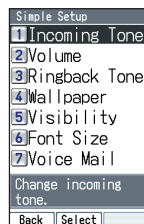

- 3 Press  (SimpleModeOFF).

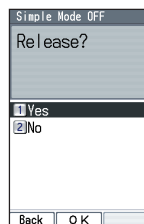


- 4 Press  (Yes).

This returns to Usual Mode.




Using the Simple Mode Main Menu

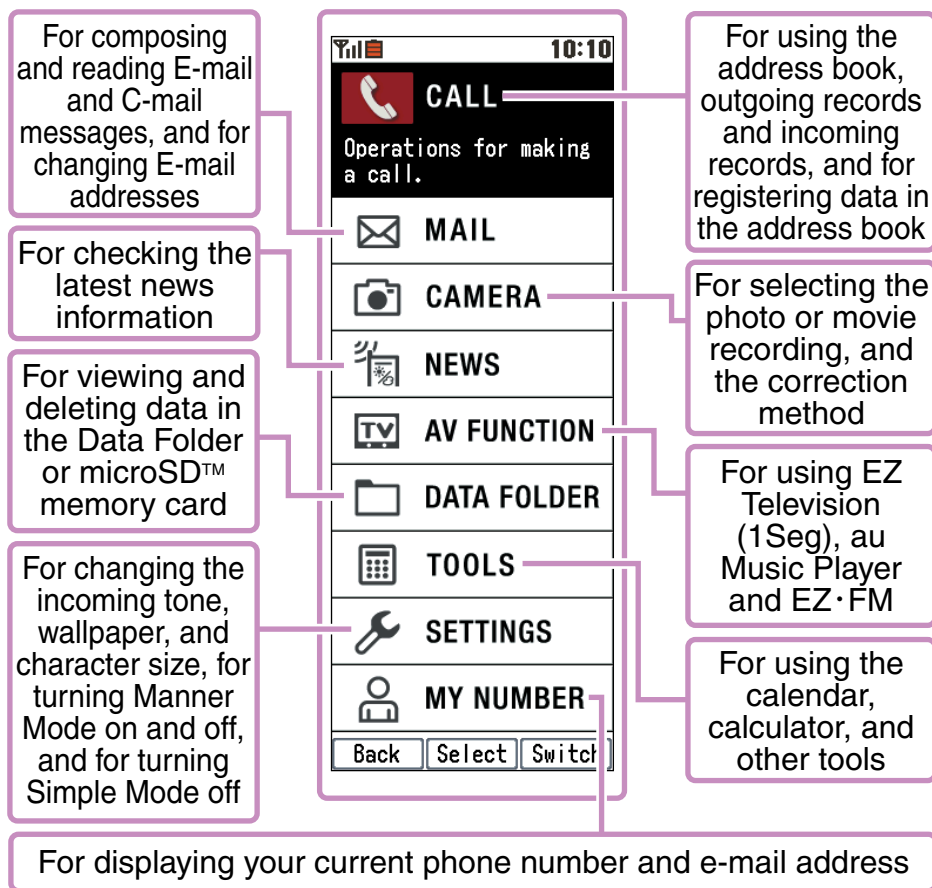


 

Info

Simple Mode has its own main menu.

 
You can switch between the two available Simple Mode main menu styles by pressing  (Switch).

Adding Data to the Address Book in Simple Mode





- 1 While the standby screen is displayed, press , press  (Register), and then press  (Fix).




- 2 Enter the name, and then press  (OK).


To input text
→ "Inputting Characters" (page 38)



- 3 Check the reading of the name you inputted, press  (OK), and then press  (Input by Myself).

You can also select data in incoming records or outgoing records.
To go without saving the telephone number, press  (Not Input) and perform step 5.




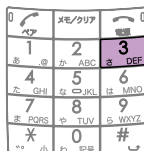
- 4 Enter the phone number, and then press  (OK).

When entering the number of a standard phone, be sure to start with the area code.




5 Press (Input by Myself).

You can also select data in sending records or receiving records.
To go without saving e-mail address, press  (Not Input) and perform step 7.




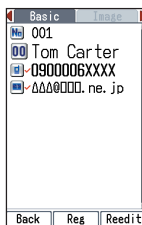
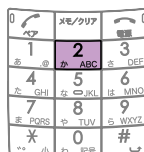
6 Enter the e-mail address, and then press (OK).

To input an e-mail address
→ “Inputting an E-mail Address”
(page 39)

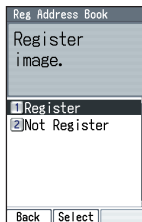

7 Press (Not Register).

 

 
The confirmation screen appears.
Press  (OK).



8 Press (Reg).




 
Info

- In Simple Mode, you can only input “Name,” “Reading,” “Phone Number1,” “E-Mail Add1,” and “Image” data into an address book record.
- You can press  (Register) in step 7 to select a photo in the Data Folder and assign it to the address book record.
- Pressing  (Reedit) in step 8, and then pressing  (Change) returns to step 2 from which you can edit the contents of the record.



Using the Address Book in Simple Mode




Example: To view a record in address book




 
- 1 While the standby screen is displayed, press , and then press  (Look).

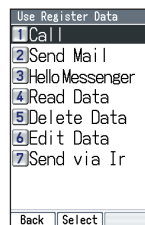


- 2 Use  to select the address book record you want to view, and then press  (Select).




- 3 Press  (Read Data).

The address book record appears. Use  to select the phone number, and press  (Call). You can make a phone call or start Hello Messenger. Use  to select the e-mail address, and press  (E-Mail). You can create an e-mail message.

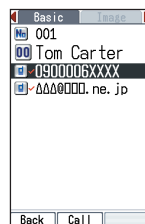



By using the address book, you can make a phone call and send an E-mail. And you can start Hello Messenger and edit and delete an address book record and send it via infrared communication.

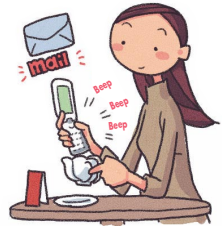Creating and Sending E-mail Messages in Simple Mode






1


While the standby screen is displayed, press , and then  (Create Mail).





2

Press , use  to select an addressee, and then press  (Select) twice.

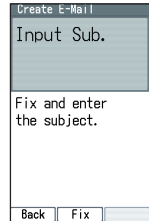
You can select an addresses from sending/receiving records, or you can manually enter an address.



3

Press , enter the subject, and then press  (OK).

To input text
→ "Inputting Characters" (page 38)

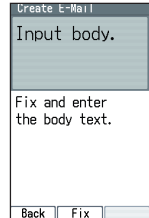



4

Press  (Fix).




5 Enter the body text, and then press (OK).

To input text
→ “Inputting Characters” (page 38)

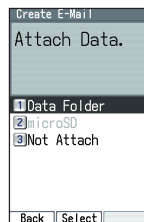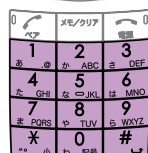

6 Press (Not Attach).

The confirmation screen appears.
Press  (OK).
In case of attaching some data with e-mail, operate the followings.


 (Data Folder):

You can select a photo saved in the Data Folder and attach it to the e-mail message.

 (microSD):

You can select a photo saved in the microSD™ memory card and attach it to the e-mail message.

In Simple Mode, an e-mail message can have only one attachment.

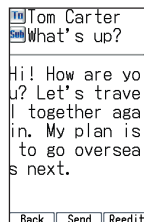



7 After checking the content of the e-mail, press (Send).

The message “E-Mail is sent.” appears on the display after the e-mail message is sent.






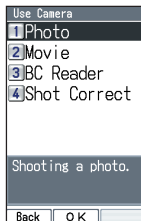
 
Info

Pressing  (Reedit) instead of  (Send) in step 7 returns to step 2, from which you can edit the contents of the e-mail message.

Shooting a Photo in Simple Mode





- 1 While the standby screen is displayed, press , use  to select "CAMERA," and then press  (Select).





- 2 Press  (Photo), and then press  (Photo1).

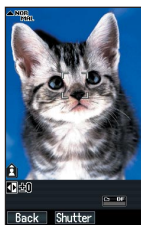Photo 1	Wallpaper 240×320
Photo 2	Wide Wallpaper 240×400
Photo 3	UXGA 1600×1200



- 3 Point the lens at the subject, and then press  (Shutter).


 
The phone will emit a shutter sound.
You can also press  in place of .



- 4 Press  (Save).



Info




Pressing  (Menu) in step 4, and then pressing  (Send Mail) will display a screen for composing an e-mail message with attached photo.

To create an e-mail message


→ Perform the procedure starting from step 2 under "Creating and Sending E-mail Messages in Simple Mode" (page 109).


Viewing Photos in Simple Mode





- 1 While the standby screen is displayed, press , use  to select “DATA FOLDER,” and then press  (Select).

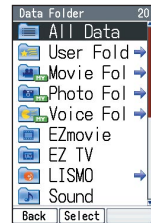




- 2 Press  (Data Folder).




 
- 3 Use  to select “Photo Folder,” and then press  (Select).



 Selecting “All Data” displays a list of all photos in the Photo Folder.




 - 4 Use  to select the dated (by shooting date) folder, and then press  (Select).

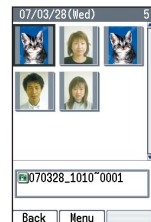A list of all photos that were shot on that day are displayed.




5 Use  to select the photo you want to view, and then press  (Menu).

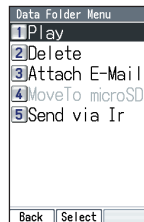

6 Press  (Play).

The photo appears.

 (Delete): Deletes data.

 
 (Attach E-Mail):


Displays a screen for composing an e-mail message with an attachment.

To create an e-mail message

→ Perform the procedure starting from step 2 under “Creating and Sending E-mail Messages in Simple Mode” (page 109).

 (MoveTo microSD): Moves the data to microSD™ memory card.

 (Send via Ir): Sends your data via infrared.

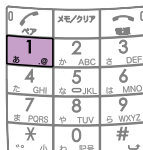

Teens Mode

Teens Mode can be used to block spam, and to block inadvertent access to phone numbers and URLs included inside mail messages. Teens Mode can also be used to restrict call time and the number of sending mail.



Using Teens Mode

■ **Teens Mode can be used to restrict mail reception and display contents.**

When the sender is a Pair Partner	Receipt is allowed.
When the sender is included in the address book	Receipt is allowed. However, the phone numbers, e-mail addresses or URLs contained in the body of the mail message can not be used.
When the sender is not either of the above	E-mail: Only the sender's name and subject are received. Body text and attached data are not received. C-mail: Not received.

■ **Turning on “Teens Restrict” and Teens Mode makes it possible to restrict call time and the number of sending mail.**




● Making a Call



To someone who is a Pair Partner	No restriction
To someone who is not a Pair Partner	Call time is restricted. Further calling is not possible if the call time exceeds the “Teens Restrict” setting.



● Sending a Mail



To someone who is a Pair Partner	No restriction
To someone who is not a Pair Partner	The number of sendings is restricted. Further mailing is not possible if the number of sendings exceeds the “Teens Restrict” setting.



Turning on Teens Mode

   

- 1 While the standby screen is displayed, press , use  to select "Settings," and then press  (OK).

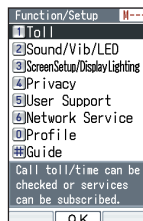



 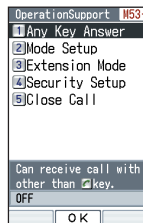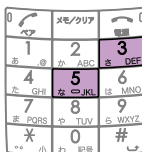
- 2 Press  (User Support), and then  (OperationSupport).



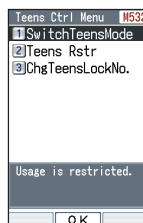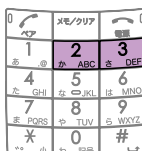- 3 Press  (Mode Setup), and then  (Teens Mode).



- 4 Press  (SwitchTeensMode), and enter the lock No., and press  (OK).

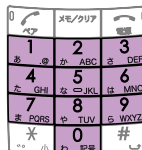


Info


The lock No. is required when changing from Teens Mode to Usual Mode or Simple Mode.

Other Functions

 Security Setup Features

With Security Setup, you can make a phone call to preregistered numbers or use high-volume buzzer just holding down  for about one second.

 Safety Buzzer


You can use W51CA as high-volume emergency buzzer by holding down  for at least one second while the standby screen is displayed.



■ To turn on Safety Buzzer

 
While the standby screen is displayed, press     , input the lock No., and then press  (OK).

■ To stop Safety Buzzer

To stop Safety Buzzer, input the lock No., and then press  (OK).


※ You cannot turn off W51CA or perform any other operation while the Safety Buzzer is sounding. The Safety Buzzer will continue to sound until you input the lock No. or the battery fully discharges.

Hot Dial

With Hot Dial, holding down  for about one second will dial a preset phone number.

■ To turn on Hot Dial

While the standby screen is displayed, press     , input the lock No., and then press  (OK).

Next, input the phone number you want to preset, and then press  (Reg).

Info

- © While connected with Casio round-type earphone jack conversion adaptor 01 and MDR-E0931 by SONY/Casio flat-type stereo earphones 03 (option)/flat-type switched earphone microphone (option)/flat-type stereo earphone-microphone (option), Safety Buzzer sounds through W51CA speaker.
- © Even when Manner Mode is on, Safety Buzzer sounds.


Extension Mode

Using the Extension Mode, W51CA automatically shuts down the radio wave after issuing the Low Battery Alert. This is quite a useful function that you can still check outgoing/incoming records, content of e-mail, address book, Schedule and so on when necessary. In this case, you can only use the functions which needs no radio wave.

To turn on Extension Mode

While the standby screen is displayed, press     .

Display example when you switch to Extension Mode

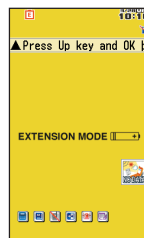

In addition to the functions covered in this Basic Manual, your W51CA also has the following features.

Global Expert

W51CA supports Global Expert based on au IC-Card.

Global Expert is an international roaming service for the customers to use the phone replacing its au IC-Card with GSM cellphone for overseas use. No special application procedure or daily/monthly fee are needed, and the call charge is added up to domestic call, so the pay procedure is simple.

au Music

You can use au Music Player to enjoy a Chaku-Uta-Full® or your favorite CD tracks. Also, you can download a Chaku-Uta-Full® or purchase CD tracks by accessing "EZ Music!"

Barcode Reader & Maker

You can use the camera to read QR codes and barcodes. Also, you can create your own barcodes directly from your address book entries.

au My Page

You can upload and backup various data in your W51CA (in Address Book, E-mail, Data Folder) to au My Page on server to manage/check them.


Infrared Communication

You can exchange the data saved in your address book, Schedule, or Data Folder between au cellphones supporting infrared communication.

EZ Apps (BREW®)

Enjoy downloaded games and other software.

Macro Mode (Photo and Movie)

Pressing  allows you to take close-up photos of food, flowers, and other subjects (closest focusing distance: 10 cm).

Serial Shot (Photo)

You can shoot up to nine consecutive images and store all of them or only selected images in memory.





 





 


 

 
Post Recording/Telop (Movie)

After recording a movie, you can add audio or text. You can select from among 24 basic colors or from a palette of 169 colors for the text and background.

EZ News Flash

You can check latest news report on your standby screen. With this total new "information delivery service," you can select news flash telop or news flash window to browse various news information.

Troubleshooting

Symptom	What to check	What to do	Page
The phone does not turn on. 	Is the battery pack installed correctly?	Correctly install the battery pack.	—
	Is the battery pack charged?	Charge the battery pack. ※	P.12
	Are you holding down  for at least 1.5 seconds?	Hold down  for at least 1.5 seconds to turn on the phone.	P.14
I can't make calls. 	Is  (Out of Range) on the display?	Wait until you are in a location where  is not displayed before trying to make a call.	P.14
	Are you including the area code?	When making a call to a standard phone, you need to input the area code, and then the phone number.	P.28
	Is the phone turned on?	Hold down  for at least 1.5 seconds to turn on the phone.	P.14
	Did you press  ?	After inputting the phone number, press  to dial it.	P.28
	Is Emission OFF Mode turned on?	Turn off Emission OFF Mode.	—
I can't receive calls.	Is  (Out of Range) on the display?	Move to a location where  is not on the display.	P.14
	Is the phone turned on?	Hold down  for at least 1.5 seconds to turn on the phone.	P.14
	Is Emission OFF Mode turned on?	Turn off Emission OFF Mode.	—
Nothing happens when I press the keys.	Is the phone turned on?	Hold down  for at least 1.5 seconds to turn on the phone.	P.14
The phone emits a warning tone, and then turns off.	Is battery pack power low?	Charge the battery pack.	P.12
The phone answers calls automatically.	Is Easy Voice Memo turned on?	Hold down  for about one second to turn off Easy Voice Memo.	P.36
	Is Drive Mode turned on?	Hold down  for about one second to turn off Drive Mode.	P.4
I can't hear the caller.	Is the earpiece volume level too low?	During a call, press  to increase earpiece volume.	P.35
	Is the earpiece covered with your ear?	Make sure to place the earpiece to the center of your ear.	—

※ If the battery level is very low, "hang on a sec?" is shown on the display, and after a while display disappear. For more detailed information, visit one for the following CASIO websites.

- On your W51CA phone, go to <http://ez.casio.jp/faq/> (CASIO Cellphone FAQ). (Japanese only)
- On your computer, go to <http://casio.jp/k-tai/faq/> (CASIO Cellphone FAQ). (Japanese only)

If you lose your W51CA


Turning on Remote Auto Lock makes it possible for you to set Auto Lock and FeliCa Lock on from a remote location. This lock function keeps others from using your W51CA.




■ Configuring Remote Auto Lock Settings

You can set Auto Lock and FeliCa Lock on by making calls several times from the registered phone number to your W51CA within the specified period of time.


- While the standby screen is displayed, press , input the lock No., and then press (OK).

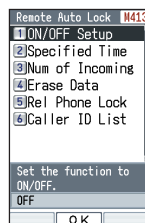

- Press (Caller ID List).

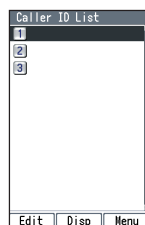


- Use to select a registration number, press (Edit), input the phone number, and then press (Reg).

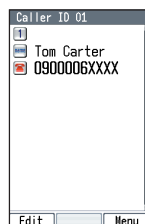


You can also press (Menu) before inputting a phone number, and select the number from the address book, outgoing records, or incoming records, or you can specify a pay phone. You can register up to three different phone numbers.

Press twice and advance to the next step.

4 Press **1** (ON/OFF Setup), and then press **1** (ON).

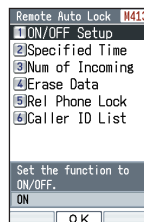


5 Press **2** (Specified Time), input the period you want to specify, and then press **OK** (OK).

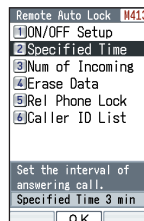

You can set the time period (the time intervals from the first call to the last call you should make to activate Remote Auto Lock).

You can set the time period between 1 to 10 minutes.

6 Press **3** (Num of Incoming), input the number of calls you want to specify, and then press **OK** (OK).

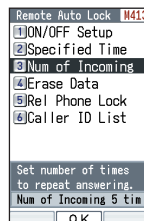

You can set how many times you should repeat making a call to activate Remote Auto Lock.

You can set it from 3 to 10 calls.

■ Setting Auto Lock and FeliCa Lock on

1 Make a call to your W51CA from the registered phone number within the period of time which has been specified in “Configuring Remote Auto Lock Settings” (page 120).

After repeating a call (3 to 10 calls you have specified), Remote Auto Lock turns active, and you hear an announcement letting you know Auto Lock and FeliCa Lock has been set.

After Remote Auto Lock turns active, your W51CA is automatically turned off, and turned on again.

⚠ CAUTION

- Remote Auto Lock cannot be activated while your W51CA is turned off or outside of the service area.
- When you purchase the W51CA, its initial value in “Erase Data” setting is “Not Erase,” and its initial value in “Rel Phone Lock” setting is “Valid.”

Index

A

Address Book	42
Adding outgoing or incoming record data to the address book	45
Deleting	43
Dialing from the address book	46
Editing	44
Registering	42
Adjusting the earpiece volume	35
Adjusting the ring tone volume	34
Answering a call	30
au IC-Card	11

B

Battery level	14
Battery pack	10, 11

C

Caller ID	28
Camera	63
Recording a movie	66
Recording movies in Viewfinder position	68
Shooting a photo	65
Shooting photos in Viewfinder position	68
Viewing photos and movies	70
Casio round-type earphone jack conversion adaptor 01	10, 96
Cellphone etiquette	1
Chaku-Uta® , Downloading	76
Chaku-Uta-Full® , Downloading	77
Changing the ring tone	32
Charging the battery pack	12
Checking charges	78
C-mail	50
C-mail Safety Block	50
Creating and sending C-mail messages ...	57
Reading received C-mail messages ...	58

D

Desktop holder	10, 12
Disaster Message Board Service	6
Display indicators	19
Display language	16
Drive Mode	4

E

Earpiece volume	35
Easy Voice Memo	36
Deleting	37
Playback	37
Turning on	36

E-mail	49
Avoiding spam	56
Changing your e-mail address	26
Creating and sending e-mail messages ...	51
Initializing e-mail	24
Looking up your current e-mail address ...	25
Reading an e-mail message with an attached photo or movie	54
Reading received e-mail messages	53
Replying to a received e-mail message ...	55
Extension Mode	117
EZ Channel-Plus/EZ Channel	79
EZ FeliCa	84
au Keitai Coupon	87
Communicating with reader/writer	85
Setting FeliCa Lock	86
Using FeliCa-supported EZ apps ...	87
EZ-FM	96
Before using an antenna	96
Listening to the EZ-FM	97
Listening to the EZ-FM as a BGM/ Stopping the EZ-FM	98
EZ Navi	80
EZ Navi Walk	81
EZ Television (1Seg)	88
Recording movies from TV programs ...	93
Stopping	95
Watching EZ Television (1Seg)	90
Watching TV programs in Viewfinder position	92
EZweb	72
Bookmarking sites	74
Downloading Chaku-Uta®	76
Downloading Chaku-Uta-Full®	77
EZ Password	76
EZ Top Menu	73
Viewing a bookmarked site	75

H

Hello Messenger	59
Invite the members to the meeting ...	61
When you get an invitation message to join	62

I

Incoming records	31
Initial settings (e-mail and EZweb) ..	24
Initial values	14
Inputting characters	38
Inputting an e-mail address	39
Inputting pictographs	40
Inputting useful sentences	40

K

Key functions 18

L

Looking up your phone number 25

M

Mail 49

 C-mail 50

 E-mail 49

Mail filter 5, 56

Main menu 20, 105

Making a call 28

Making an international call 29

Manner Mode 35

MDR-E0931 by SONY 10, 96

microSD™ memory card 11, 19

Missed call notification 30

Movie 66

 Recording a movie 66

 Recording movies in Viewfinder
 position 68

 Sending a movie by e-mail 71

 Viewing movies 70

N

Names of parts 11

O

One-ring Calls 5, 31

Operation basics 18

Outgoing records 31

P

Pair Function 47

 Inviting a Pair Partner to a Hello

 Messenger Meeting 48

 Making a phone call 48

 Registering a Pair Partner 47

 Sending mail 48

PC Site Viewer 99

 Mastering operation basics 100

 Using PointCast 101

Phone call 28

Photo 63

 Sending a photo by e-mail 71

 Shooting a photo 65

 Shooting photos in Viewfinder
 position 68

 Viewing photos 70

Playback

 Easy Voice Memo 37

 Movie 70

 Photo 70

R

Redialing (incoming/outgoing records) ... 31

Remote Auto Lock 120

S

Safety Buzzer 116

Safety Navi 82

Security Code 15

Security Setup 116

 Hot Dial 116

 Safety Buzzer 116

Self-portrait position 22

Signal strength 14

Simple Mode 103

 Adding data to the address book ... 106

 Creating and sending e-mail
 messages 109

 Entering Simple Mode 103

 Exiting Simple Mode 104

 Main menu 105

 Shooting a photo 111

 Using the address book 108

 Viewing shot photos 112

Soft keys 21

Spam 5, 56

Standby screen 14

T

Teens Mode 114

Terrestrial digital TV broadcasting .. 89

Troubleshooting 119

Turning on power 14

U

Unsolicited advertisements 5, 56

Using Menus 21

V

Vibrating 35

Viewfinder position 22, 23

For inquiries, call:

au Customer Service Center (General Information)

From EZweb site:

How to access

EZ→Top Menu→au お客さまサポート

(au Customer Support)

→お問い合わせ (Inquiries)

※ Menu structure is subject to change without notice.



From regular phones:

 **0077-7-111**
フリーコール

(toll free)

From au cellphones:


157 area code not required
(toll free)

Pressing "zero" will connect you to an operator,
after calling "157" on your au cellphone.

Sales: KDDI Corporation
Okinawa Cellular Telephone Company
Manufactured by
CASIO COMPUTER CO., LTD.

Read this to access to the
au online manual



モバイル・リサイクル・ネットワーク
携帯電話・PHSのリサイクルにご協力を。
Cellphone and PHS operators collect and
recycle unused telephones, batteries and
battery chargers at stores bearing the 
logo regardless of brand and
manufacturer to protect the environment
and reuse valuable resources.

MN6270YAA-1
January 2007, 1st Edition